



Rear Side Air Curtain Module (76.74.04)

Removal



WARNING: It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.

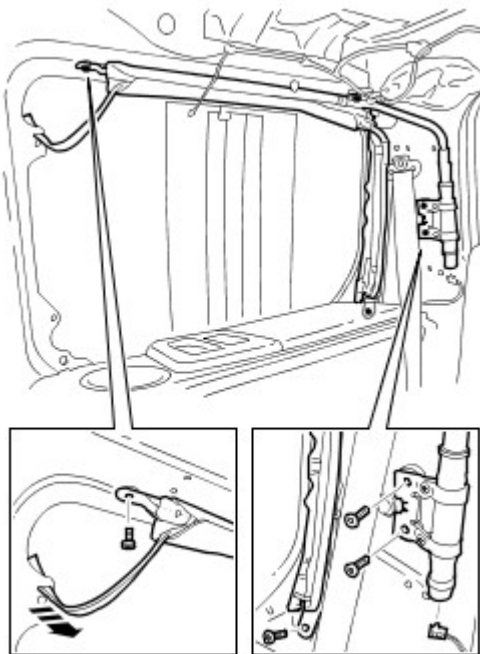


WARNING: Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

NOTE :




If the SRS component is to be replaced, the bar code of the new unit must be recorded.

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
3. Remove the headliner. For additional information, refer to [Headliner \(76.64.15\)](#) (Section 501-05)
4. Remove the side air curtain module.
 - Disconnect the electrical connector.
 - Remove the 5 Torx screws.
 - Release the retaining strap.



E49973

Installation

- 1 . Install the side air curtain module.
 -  Tighten the Torx screws to 10 Nm (7 lb.ft).
 -  Connect the electrical connector.
 -  Secure the retaining strap.
- 2 . Install the headliner. For additional information, refer to [Headliner \(76.64.15\)](#) (Section 501-05)
- 3 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)