



Restraints Control Module (RCM) (76.74.68)

Removal



WARNING: It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.



WARNING: Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

NOTE :

If the restraints control module (RCM) is to be replaced then T4 must be connected and the correct procedures adhered to, prior to battery disconnection.

NOTE :

If the SRS component is to be replaced, the bar code of the new unit must be recorded.

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
- 3 . Remove the floor console. For additional information, refer to [Floor Console \(76.25.01\)](#) (Section 501-12)


4 .



CAUTION: Make sure the wiring harness is protected when cutting the carpet.

Remove the restraints control module (RCM).

- ▶ Cut the carpet for access.
- ▶ Disconnect the 2 electrical connectors.
- ▶ Remove the 3 Torx screws.

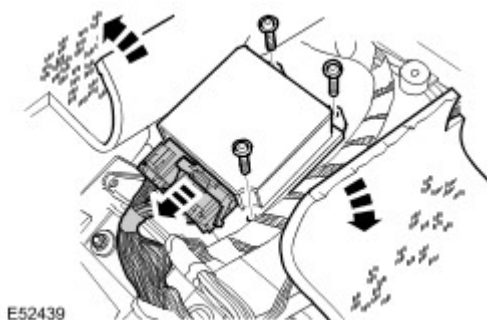

Installation

- 1 .

Install the RCM.

- ▶ Tighten the Torx screws to 10 Nm (7 lb.ft).
- ▶ Connect the electrical connectors.
- ▶ Position the carpet.

- 2 . Install the floor console. For additional information, refer to [Floor Console \(76.25.01\)](#) (Section 501-12)
- 3 . Initiate a new RCM using T4.