



## Side Air Bag Module (76.74.30)

### Removal




**WARNING:** It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.




**WARNING:** Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

1. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
2. Remove the front seat backrest cover. For additional information, refer to [Front Seat Backrest Cover \(78.90.08\)](#) (Section 501-10)
3. Remove the front seat backrest pad.
  - Remove the front seat head restraint retaining clips.

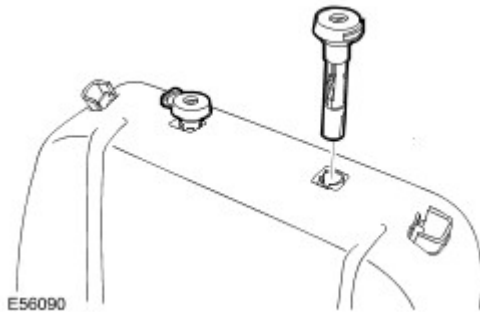

4. **NOTE :**
  - If the SRS component is to be replaced, the bar code of the new unit must be recorded.
  - Remove the side air bag module.
    - Release the side air bag module harness.
    - Remove the 2 nuts.

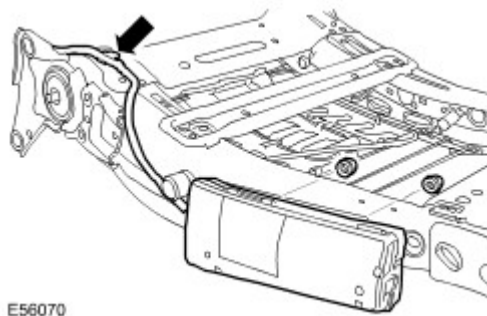

### Installation

- 1 . Install the side air bag module.
  - ▶ Tighten the nuts to 10 Nm (7 lb.ft).
  - ▶ Attach the wiring harness.
- 2 . Install the front seat backrest pad.
  - ▶ Install the front seat head restraint retaining clips.
- 3 . Install the front seat backrest cover. For additional information, refer to [Front Seat Backrest Cover \(78.90.08\)](#) (Section 501-10)