



## Side Air Curtain Module (76.74.40)

### Removal



**WARNING:** It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.

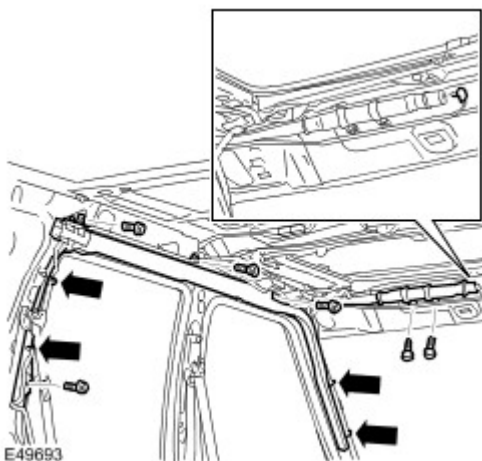


**WARNING:** Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

#### NOTE :



If the SRS component is to be replaced, the bar code of the new unit must be recorded.

1. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
2. Remove the headliner. For additional information, refer to [Headliner \(76.64.15\)](#) (Section 501-05)
3. Release the roof opening panel drain tube from the securing clips.
4. Release the tire deflation wiring harness from securing clips.
5. Remove the side air curtain module.
  - Remove the 8 screws.
  - Remove the 5 Torx screws.
  - Disconnect the electrical connector.



### Installation

1. Install the side air curtain module.
  - Tighten the Torx screws to 10 Nm (7 lb.ft).

-  Tighten the screws.
-  Connect the electrical connector.

- 2 .           Secure the tire deflation wiring harness into the clips.
- 3 .           Secure the roof opening panel drain tube into the clips.
- 4 .           Install the headliner. For additional information, refer to [Headliner \(76.64.15\)](#) (Section 501-05)