


Published : Sep 29, 2004

## B-Pillar Outer Panel

### Removal


- 1 . Disconnect both battery cables. For additional information, refer to [Specifications](#) (Section 414-00 )
- 2 . Remove the rear door assembly.
  - Disconnect the electrical connector
  - Release the wiring harness grommet
  - Release the wiring harness retaining clip
  - Remove the 2 bolts

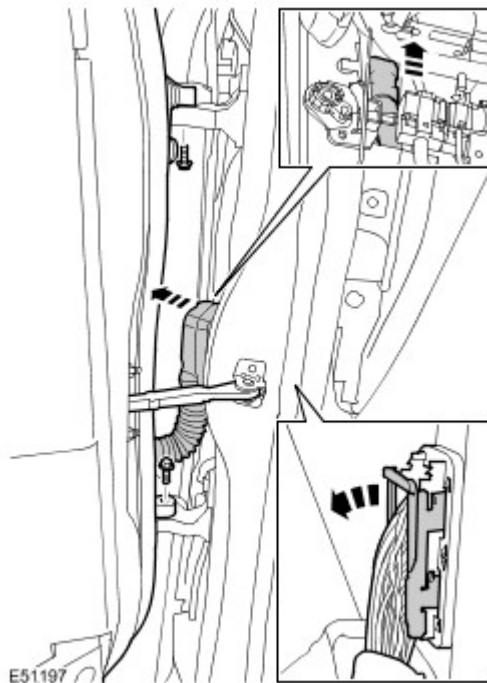

- 3 . Remove front door striker.
- 4 . Remove the front seat. For additional information, refer to [Front Seat \(78.10.44/99\)](#) (Section 501-10 )
- 5 . Remove the rear seat. For additional information, refer to [Rear Seat - Vehicles With: 60/40 Split Seat \(78.10.70/78.10.71\)](#) (Section 501-10 )
- 6 . Remove the B-pillar side impact sensor. For additional information, refer to [B-Pillar Side Impact Sensor \(76.74.23\)](#) (Section 501-20B )
- 7 . Remove the side air curtain module. For additional information, refer to [Side Air Bag Module \(76.74.30\)](#) (Section 501-20B )
- 8 . Remove the wiring harness from the B-pillar.


- 9 . Release the wiring harness from the rocker panel.
- 10 . Remove the front safety belt retractor. For additional information, refer to [Front Safety Belt Retractor \(76.73.13\)](#) (Section 501-20A )
- 11 . Remove the rocker panel outer trim.
- 12 . Release the carpet.
- 13 .

Item	Description
1	Cut line and butt weld.
2,4	81 spot welds.
3	Butt welds.

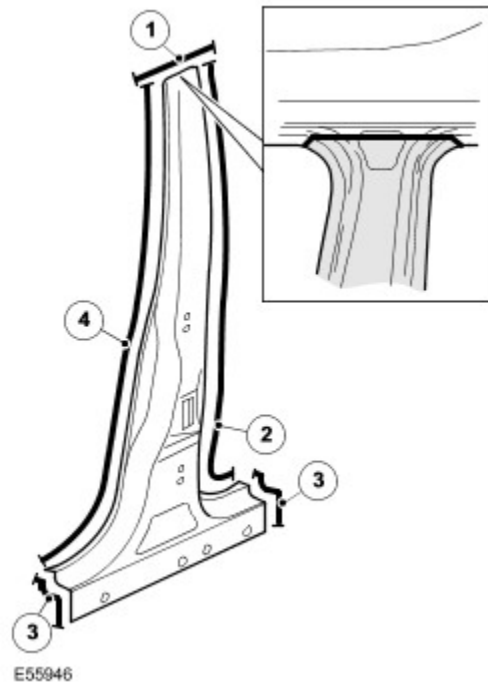

- 14 .

Item	Description
1	Adhesive.
2	6 plug welds.
3	19 plug welds.
4	Acoustic seal.

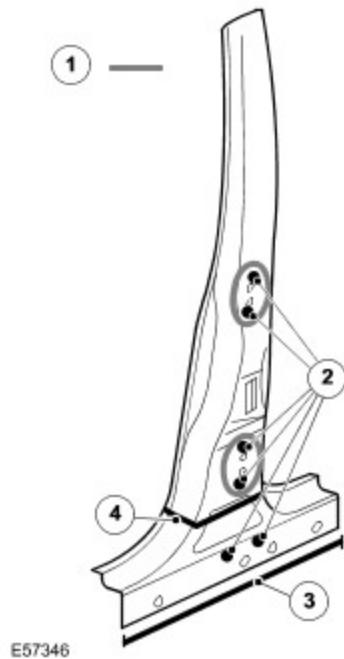

15 .

For additional information:

- Welding. For additional information, refer to [Body Repairs](#) (Section 501-25A Body Repairs - General Information)
- Corrosion protection. For additional information, refer to [Corrosion Protection](#) (Section 501-25B Body Repairs - Corrosion Protection)
- Tolerance checks. For additional information, refer to [Body and Frame](#) (Section 501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks)

## Installation

1 .

Install is the reversal of removal.