


ELECTRICAL PARTS

A6E201700006E01

Battery cable

- Before disconnecting connectors or removing electrical parts, disconnect the negative battery cable.

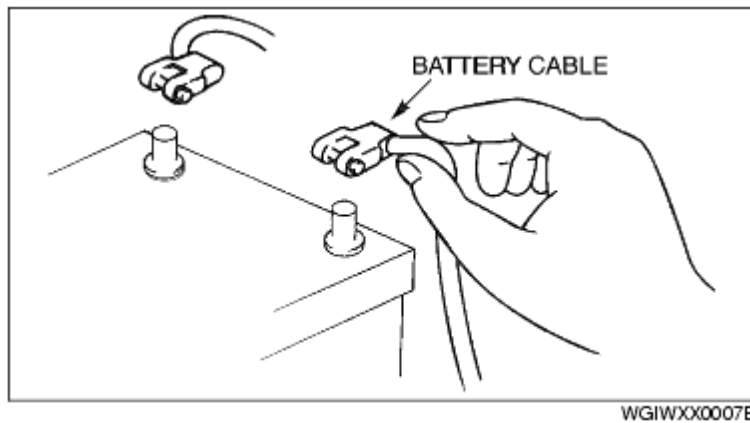

Wiring Harness

- To remove the wiring harness from the clip in the engine room, pry up the hook of the clip using a flathead screwdriver.

