

# OIL JET VALVE INSPECTION

---

A6E242410730E02

1. Apply compressed air to oil jet valve A and verify that air passes through oil jet valve B.

- If not ventilation, replace the oil jet valve.

Air pressure:

216-274 kPa {2.2-2.7kgf·cm<sup>2</sup> 31.4-39.7 psi}

