


ENGINE SST

A6E941001001E01

Ford SST numbers are collated with Mazda SST numbers in the example below.


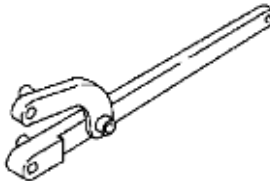
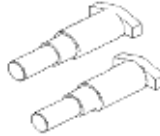
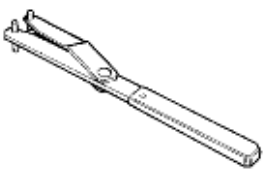
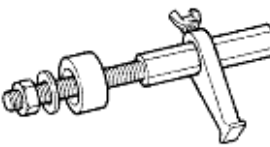

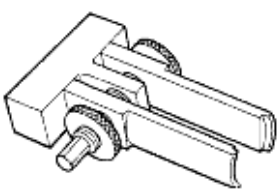

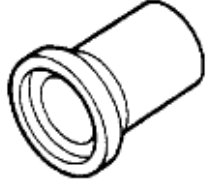
Ford SSTs are marked with Ford SST number.

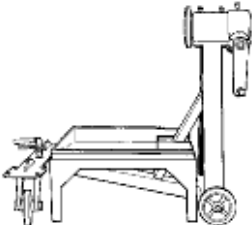
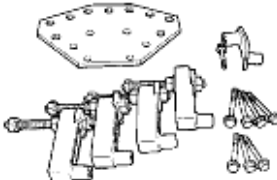
 
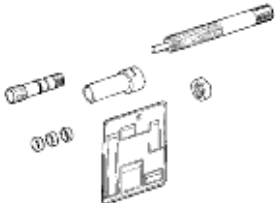
 
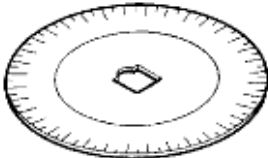
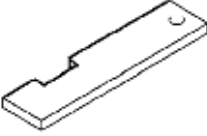
Example

1:49 JE01 061	
2:303-507	
Peg	

1: Mazda SST number

2: Ford SST number

1:49 JE01 061		1:49 UN20 5072		1:49 UN20 507202	
2:303-507		2:205-072		2:205-072-02	
Peg		Holder		Adapter	
1:49 G032 354		1:49 E011 1A0		1:49 0636 100B	
2: -		2: -		2: -	
Adjusting wrench		Ring gear brake set		Valve spring lifter arm	
1:49 B012 0A2		1:49 B012 015		1:49 H010 401	
2: -		2: -		2: -	
Pivot		Valve guide installer		Oil seal installer	
1:49 0107 680A		1:49 L010 1A0		1:49 S120 170	

2: - Engine stand		2: - Engine hanger set		2: - Valve seal remover	
1:49 L012 0A0B 2: - Valve seal and valve guide installer set		1:49 T032 302 2: - Bearing installer		1:49 D032 316 2: - Protractor	
1:49 JE01 054 (Europe) 49 UN30 3376 (Except Europe) 2: 303-376 Plate		1:49 G011 201 2: - Attachment	