


OIL JET VALVE INSPECTION

B3E011010730201

1. Apply compressed air to oil jet valve A and verify that air passes through oil jet valve B.

- If air does not flow, replace the oil jet valve.

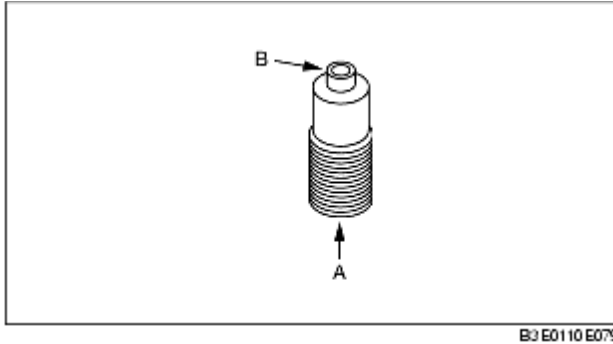

B3 E0110 E079

Air pressure**216-274 kPa {2.2-2.7 kgf·cm² 31.4-39.7 psi}**