

VALVE CLEARANCE INSPECTION


B3E011012111203

1. Measure the valve clearance as follows.

- (1) Turn the crankshaft clockwise so that the No.1 piston is at TDC of the compression stroke.
- (2) Measure the valve clearance at A in the figure.
 - If the valve clearance exceeds the standard, replace the tappet. (See [VALVE CLEARANCE ADJUSTMENT](#).)

Note

- Make sure to note the measured values for choosing the suitable replacement tappets.

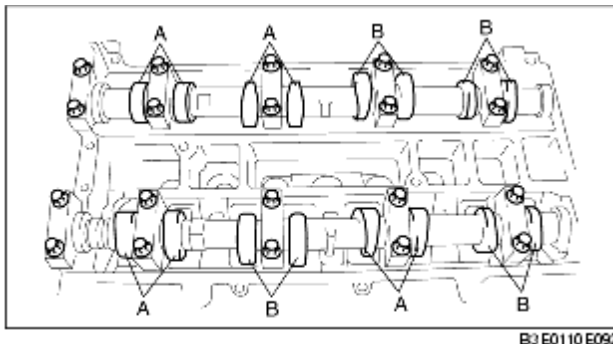

B3 E0110 E092

Standard [Engine cold]

IN: 0.22-0.28 mm {0.0087-0.0110 in}

EX: 0.27-0.33 mm {0.0106-0.0130 in}

- (3) Turn the crankshaft **360°** clockwise so that the No.4 piston is at TDC of the compression stroke.
- (4) Measure the valve clearance at B in the figure.
 - If the valve clearance exceeds the standard, replace the tappet. (See [VALVE CLEARANCE ADJUSTMENT](#).)

Note

- Make sure to note the measured values for choosing the suitable replacement tappets.

Standard [Engine cold]

IN: 0.22-0.28 mm {0.0087-0.0110 in}

EX: 0.27-0.33 mm {0.0106-0.0130 in}