



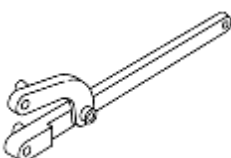
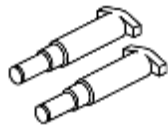
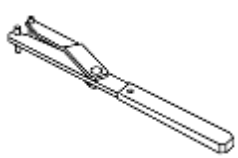
 

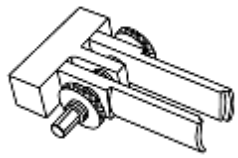

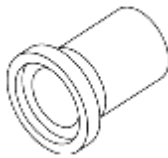
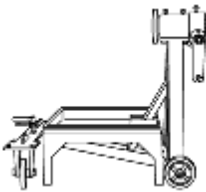
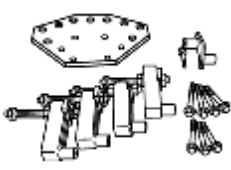
 
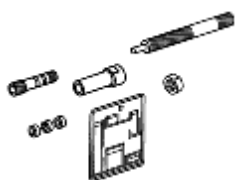

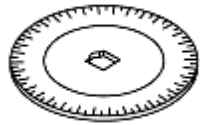
# ENGINE SST



 
B3E016001001201

1: Mazda **SST** number2: Global **SST** number

## Example

1:49 JE01 061 2:303-507  Crankshaft TDC Setting Pin	
--	---

1:49 JE01 061 2:303-507  Crankshaft TDC Setting Pin		1:49 UN20 5072 2:205-072  Holder		1:49 B011 105 2: -  Adapter	
1:49 G032 354 2: -  Adjusting wrench		1:49 E011 1A0 2: -  Ring gear brake set		1:49 0636 100B 2: -  Valve spring lifter arm	
1:49 B012 0A2 2: -  Pivot		1:49 B012 015 2: -  Valve guide installer		1:49 H010 401 2: -  Oil seal installer	
1:49 0107 680A 2: -  Engine stand		1:49 L010 1A0 2: -  Engine hanger set		1:49 S120 170 2: -  Valve seal remover	
1:49 L012 0A0B 2: -  Valve seal and valve guide installer set		1:49 T032 302 2: -  Bearing installer		1:49 D032 316 2: -  Protractor	
1:49 JE01 054 Camshaft		49 UN30 3376 2: 303-376		1:49 G011 201	

Alignment timing Tool (Europe)		Camshaft Alignment timing Tool (Except Europe)		2: - Attachment	
--------------------------------------	---	--	---	--------------------	---