

# PARKING MECHANISM STRUCTURE

---

B3E051701030A24

- The parking pawl is installed in the transaxle case via the parking pawl shaft and pushed to the support actuator by the return spring except in P position.

The parking rod component is designed to slide on the support actuator and connected to the manual plate.