


## OIL PUMP STRUCTURE

---

B3E051719220A03

- The outer rotor and the inner rotor are installed in the oil pump housing.
- The inner rotor in the oil pump housing is driven by the torque converter.

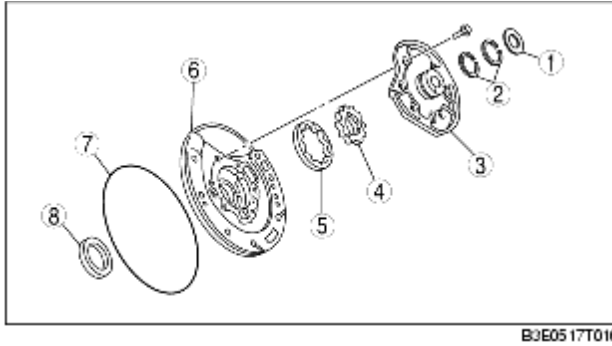

B3E05 17T016

1	Thrust washer
2	Seal ring
3	Oil pump cover
4	Inner rotor
5	Outer rotor
6	Oil pump housing
7	O-ring
8	Oil seal