


SHIFT SOLENOID D, AND E (ON/OFF TYPE) OPERATION

B3E051721100A07

ON : When the electrical current flows, the output port and the supply port (solenoid reducing pressure) are engaged in the solenoid, and the output pressure becomes equivalent to the solenoid reducing pressure.

OFF : When the electrical current does not flow, the output port and the drain port are engaged in the solenoid, and the output pressure is drained.

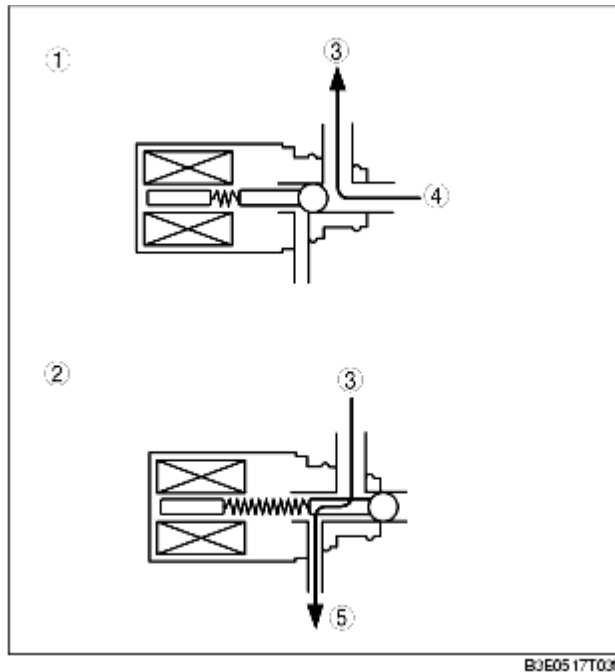

1	Electrical current flows
2	Electrical current does not flow
3	Output port
4	Supply port (solenoid reducing pressure)
5	Drain