


PRESSURE CONTROL SOLENOID (LINEAR TYPE) OPERATION


B3E051721100A09

- By changing the electrical current value (0 A-1 A) inside the solenoid, the pressure control solenoid adjusts the hold power of the hold pressure valve, controlling the pressure control solenoid pressure to the prescribed hydraulic pressure.

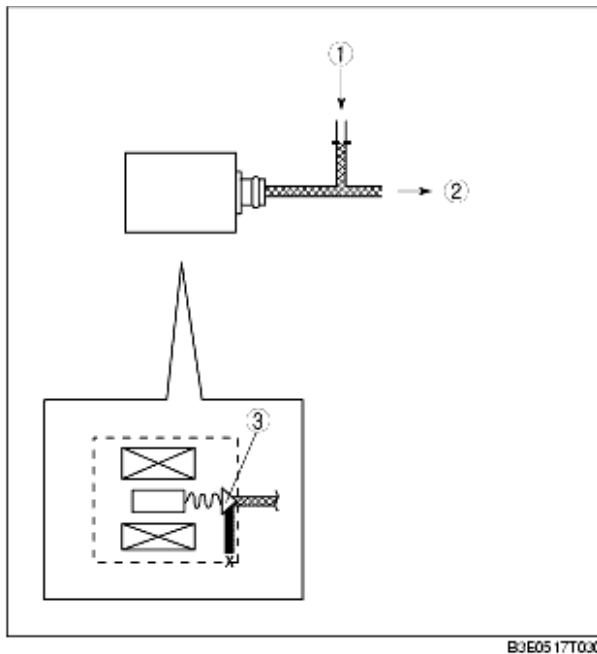

B3E0517T030

| | |
|---|-----------------------------|
| 1 | Solenoid reducing pressure |
| 2 | To pressure regulator valve |
| 3 | Hold pressure valve |

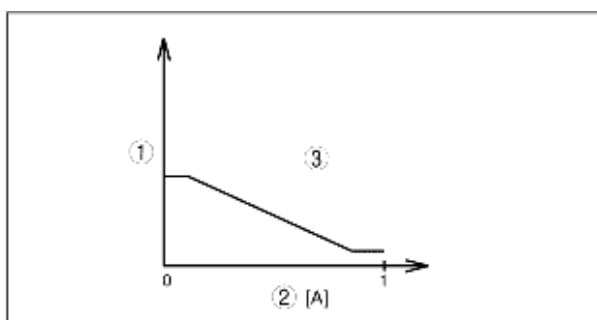

B3E0517T031

| | |
|---|------------------------------------|
| 1 | Hydraulic pressure |
| 2 | Electrical current value |
| 3 | Pressure control solenoid pressure |