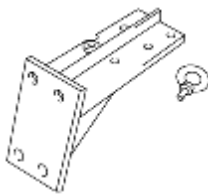
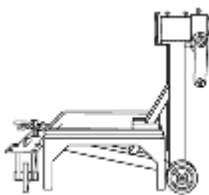
 
 
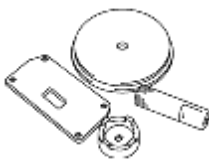
 

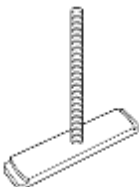
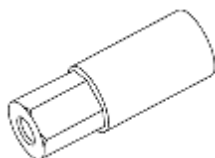

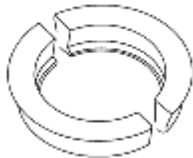
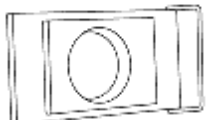
 
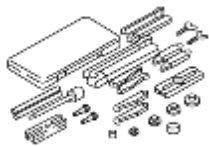
 
 

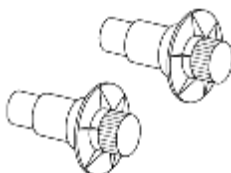
 
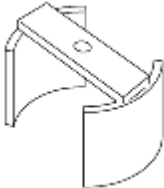

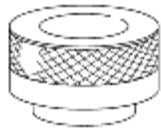
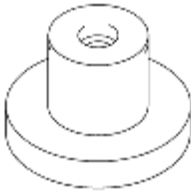

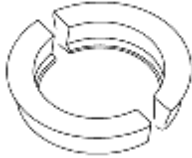
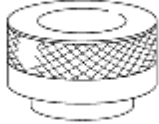
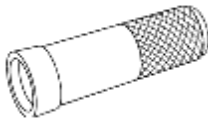
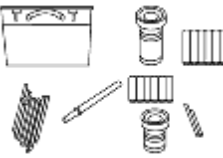


TRANSMISSION/TRANSAXLE SST

B3E056001030A01

49 B019 010 Transmission Hanger		49 0107 680A Engine Stand		49 B019 009 Adapter	
49 0378 390 Oil Pump Puller		49 B019 0A1 Lock Nut Remover Set		49 W032 2A0 Bearing Remover Set	
49 B019 012 Return Spring Compressor		49 G019 027 Attachment A		49 G019 029 Nut	
49 W019 002 Body		49 B017 209 Attachment J		49 F401 366A Plate	
49 G030 160 Valve Seal Pusher		49 0839 425C Bearing Puller Set		49 B019 014 Removing Plate	
49 S231 626 Support Block		49 G030 338 Attachment E		49 G030 455 Diff. Side Gear Holder	
49 0500 330 Bearing Installer		49 B019 011 Return Spring Compressor		49 0727 415 Bearing Installer	
49 V001 525 Bearing Installer		49 F026 102 Bearing Installer		49 T019 007 Attachment	

					
49 B017 206 Attachment F		49 UB71 525 Bearing Installer		49 F401 331 Body	
49 B019 0A3 Shim Selector Set		49 0180 510B Preload Measuring Attachment	