
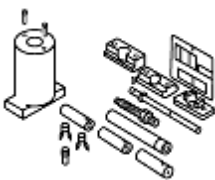
 
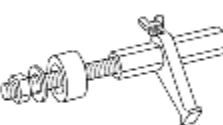
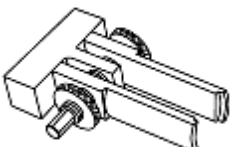
 
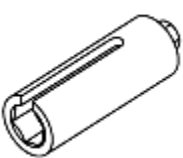

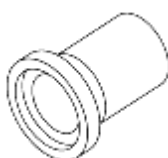
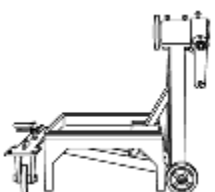
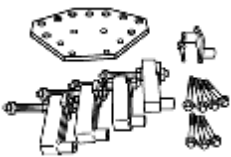
 
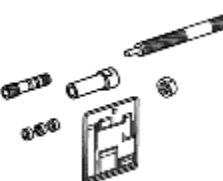

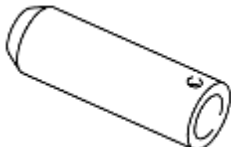



ENGINE SST

B3E016001001E01

49 E033 101 Dust cover installer		49 L011 0A0C Piston pin setting set		49 T032 302 Bearing installer	
49 E011 1A0 Ring gear brake set		49 B012 0A2 Pivot		49 0636 100B Valve spring lifter arm	
49 H018 001 Knock sensor wrench		49 B012 015 Valve guide installer		49 H010 401 Oil seal installer	
49 0107 680A Engine stand		49 L010 1A0 Engine hanger set		49 S120 170 Valve seal remover	
49 L012 0A0B Valve seal and valve guide installer set		49 G014 001 Oil filter wrench		49 E011 001A Piston pin guide	
49 E011 002A Screw		-	-	-	-