


CLUTCH COMPONENT DISASSEMBLY/ASSEMBLY

A6E561419500A01

1. Carry out the preinspection before disassembly. (See [Clutch Component Preinspection.](#))
2. Disassemble in the order indicated in the table.
3. Assemble in the reverse order of disassembly.

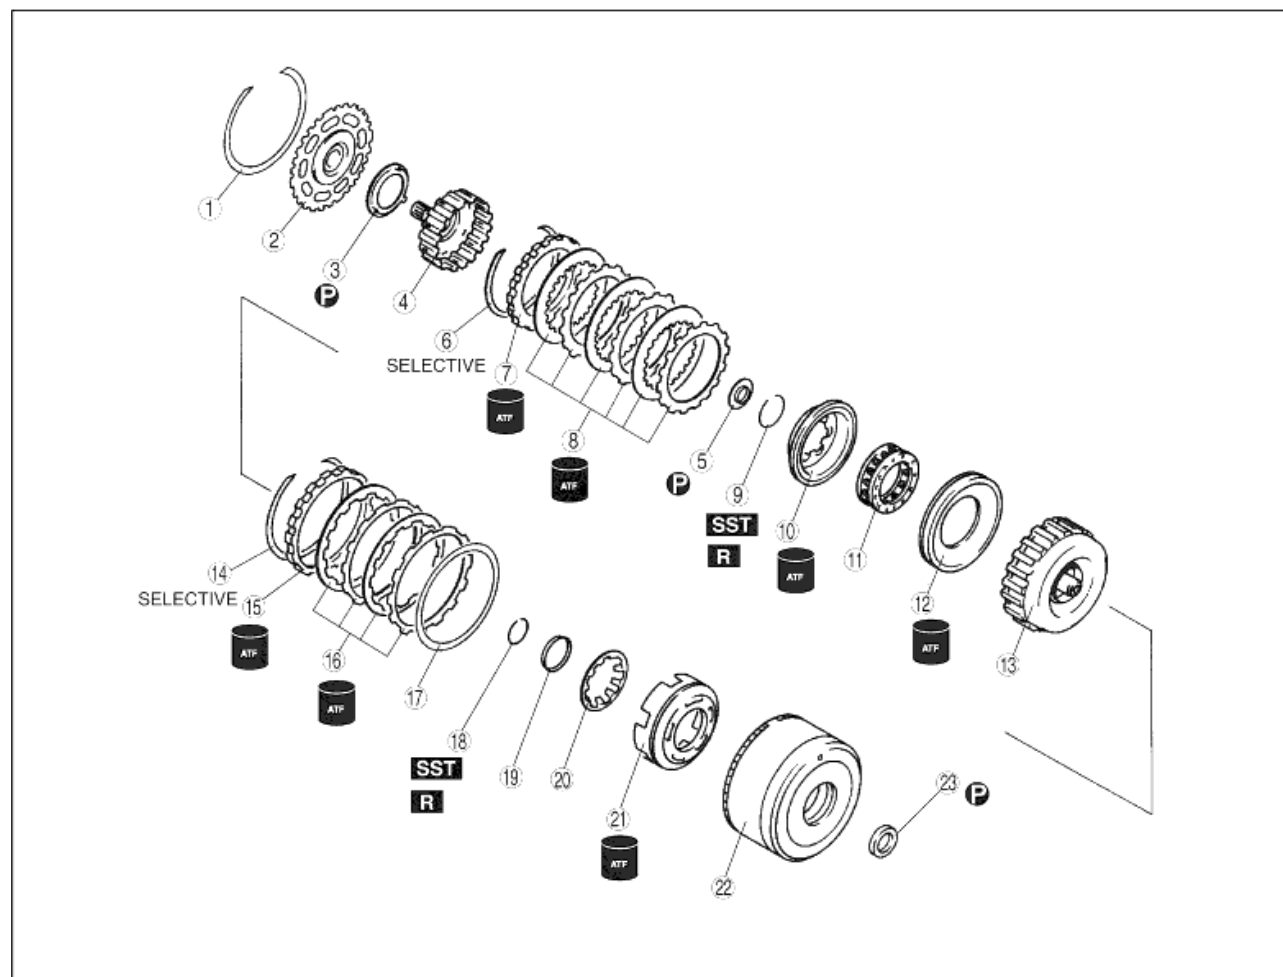

A6E5714A033

1	Snap ring
2	Rear sun gear plate
3	Bearing
4	3-4 clutch hub
5	Bearing
6	Snap ring
7	Retaining plate
8	Drive and driven plate
9	Snap ring (See Snap Ring (3-4 clutch) Disassembly Note)
10	Seal plate
11	Spring and retainer component
12	3-4 clutch piston (See 3-4 Clutch Piston Disassembly Note)

13	3-4 clutch drum
14	Snap ring
15	Retaining plate
16	Drive and driven plate
17	Dish plate
18	Snap ring (See Snap Ring (Reverse clutch) Disassembly Note)
19	Reverse return stopper
20	Piston return spring
21	Reverse piston (See Reverse Piston Disassembly Note)
22	2-4 brake drum
23	Bearing


Snap Ring (3-4 clutch) Disassembly Note

1. Install the **SST** as shown.

Caution

- Depress the seal plate only enough to remove the snap ring. Overpressing will damage the seal plate assembly edges.


2. Compress the seal plate.
3. Remove the snap ring.

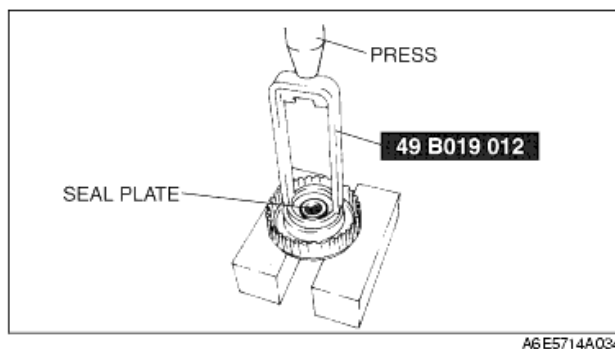

4. Remove the **SST**, then remove the seal plate and spring and retainer component.

3-4 Clutch Piston Disassembly Note

1. Set the 3-4 clutch drum onto the end cover.
2. Remove the 3-4 clutch piston from the 3-4 clutch drum by applying compressed air through the fluid passage.

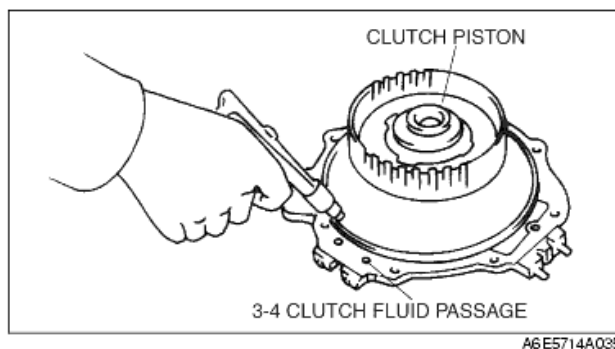

Air pressure
392 kPa {4.0 kgf/cm², 57 psi} max.


Snap Ring (Reverse clutch) Disassembly Note

1. Install the **SSTs** as shown.

Caution

- Depress the piston return spring only enough to remove the snap ring. Overpressing will damage the piston return spring assembly edges.


2. Compress the piston return spring.
3. Remove the snap ring.

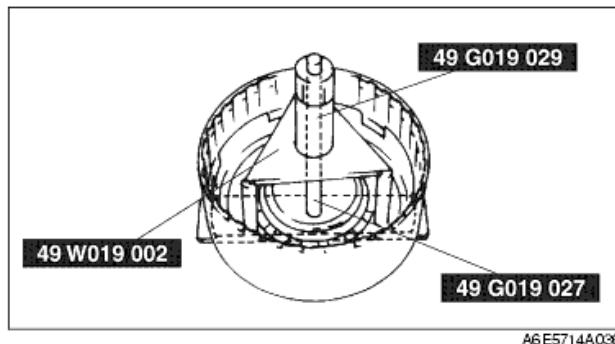

4. Remove the **SSTs**, then remove the reverse return stopper and return spring.

Reverse Piston Disassembly Note

1. Set the 2-4 brake drum onto the end cover.
2. Remove the reverse piston from the 2-4 brake drum by applying compressed air through the fluid passage.

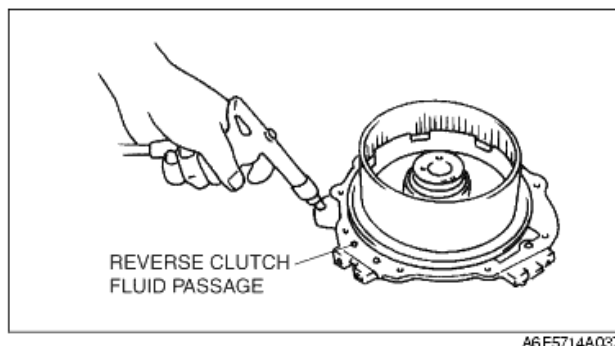

Air pressure
392 kPa {4.0 kgf/cm², 57 psi} max.

Assembly Procedure


1. Measure the facing thickness in three places and calculate the average value.

Drive plate part number: FN11 19 370
Standard: 1.60 mm {0.063 in}
Minimum: 1.45 mm {0.057 in}
Drive plate part number: FNE1 19 370
Standard: 2.55 mm {0.100 in}
Minimum: 2.40 mm {0.094 in}

2. If not within the specification, replace the drive plates.
3. Measure the free length of the spring and inspect for deformation.


Spring free length
 Standard: 17.0 mm {0.669 in}
 Minimum: 15.0 mm {0.591 in}

4. If not within the specification, replace the spring and retainer.
5. Verify that there is airflow when applying compressed air through the fluid passage of 3-4 clutch drum.

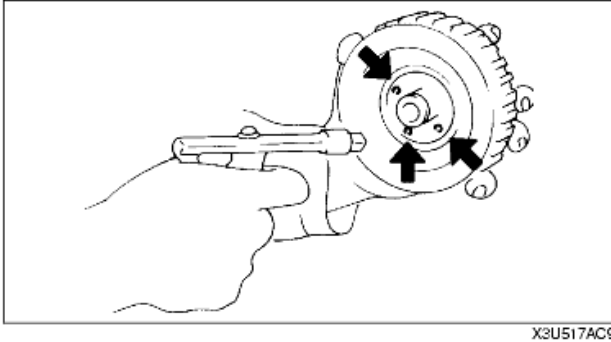


Air pressure
 392 kPa {4.0 kgf/cm², 57 psi} max.

6. Replace the 3-4 clutch drum if damaged or malfunctioning.
7. Verify that there is airflow when applying compressed air through the fluid passage of 2-4 brake drum.

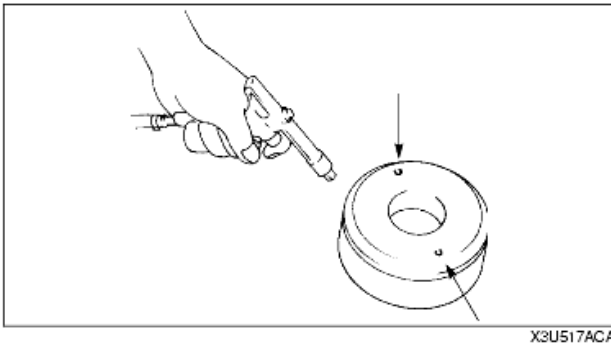

Air pressure
 392 kPa {4.0 kgf/cm², 57 psi} max.

8. Replace the 2-4 brake drum if damaged or malfunctioning.
9. Measure the bushing of the rear sun gear.

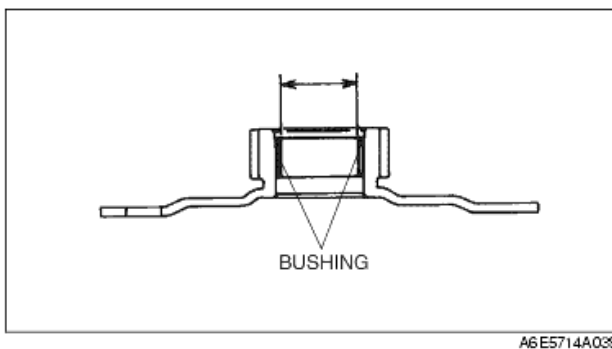

Bushing inner diameter
 Standard:
 26.400-26.421 mm {1.03937-1.04019 in}
 Maximum: 26.441 mm {1.04098 in}

10. If not as specified, replace the rear sun gear plate.


11. Install the reverse clutch.

Caution

• Installing the reverse clutch piston may damage its seal. Carefully install the reverse clutch piston by pushing evenly around the circumference.


(1) Apply ATF to the circumference of the reverse clutch piston seal, and install the piston into the 2-4 brake drum.

(2) Install the piston return spring and reverse return stopper to the reverse piston.

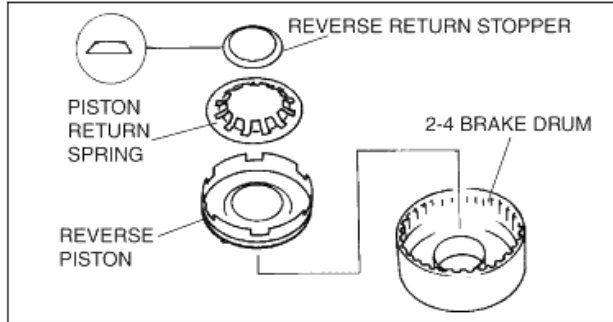

A6E5714A039

(3) Install the snap ring and the **SSTs** to the 2-4 brake drum as shown.

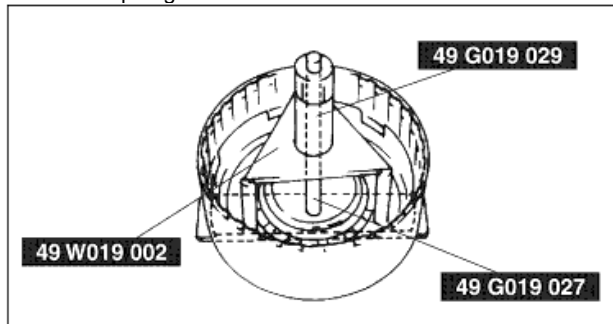

A6E5714A036

Caution

• Depress the piston return spring only enough to install the snap ring. Overpressing will damage the piston return spring assembly edges.

(4) Compress the piston return spring.

(5) Install the snap ring.


(6) Remove the **SSTs**.

(7) Install the dish plate.

(8) Install the drive and driven plates in the following order.

Driven-Drive-Driven-Drive

(9) Install the retaining plate.

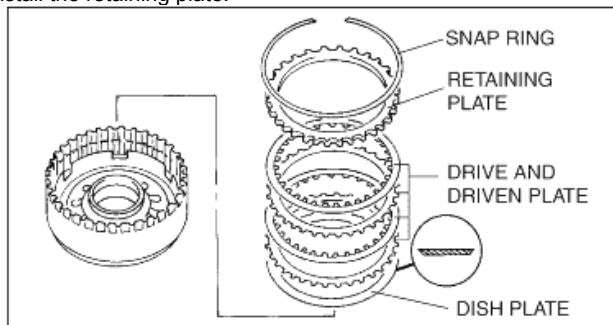


A6E5714A040


12. Measure the reverse clutch clearance.

(1) Install the reverse clutch into the end cover, and set the dial gauge.

(2) Secure the reverse clutch by lightly pressing down with a press, etc.

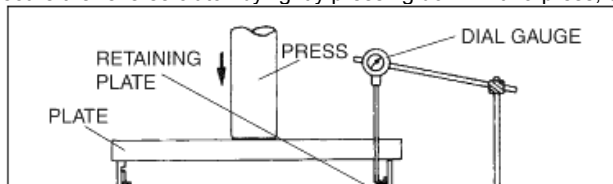

- (3) Apply compressed air to the part indicated in the figure and let the reverse clutch piston stroke three times.

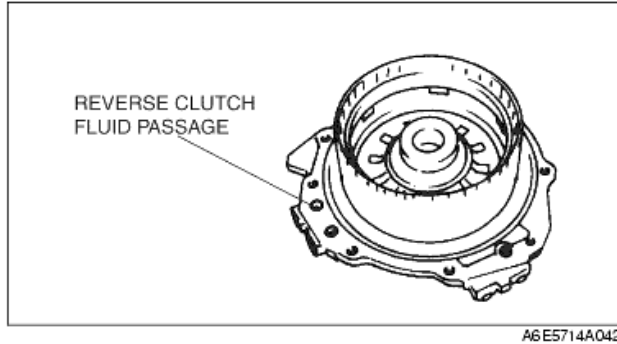


A6E5714A042

Air pressure

392-441 kPa {4.0-4.5 kgf/cm², 57-63 psi}

- (4) Apply compressed air and operate the reverse clutch piston. Read the value when the indicator of the dial gauge stops.
 (5) Release the compressed air and read the dial gauge when the reverse clutch piston is not operating.
 (6) Calculate the reverse clutch clearance according to the following formula:
 step (4) value - step (5) value = Reverse clutch clearance.
 (7) Measure the clearances at four locations (90° apart) by following the steps from (3) to (6). Verify that the average value is within the specification below.

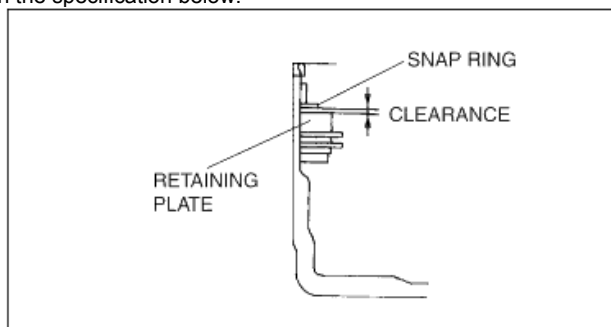

A6E5714A043

Reverse clutch clearance

1.00-1.03 mm {0.039-0.051 in}

- (8) If not as specified, remove the snap ring and measure its thickness.
 (9) Add the thickness to the average value calculated in step (7), and select the snap ring whose range includes the value.


Snap ring sizes

Range mm {in}	Snap ring sizes mm {in}
2.250-2.450 {0.089-0.096}	1.2 {0.047}
2.450-2.650 {0.096-0.104}	1.4 {0.055}
2.650-2.850 {0.104-0.112}	1.6 {0.063}
2.850-3.050 {0.112-0.120}	1.8 {0.071}
3.050-3.250 {0.120-0.128}	2.0 {0.079}
3.250-3.450 {0.128-0.136}	2.2 {0.087}

- (10) Install the selected snap ring and perform steps (2) to (7) again. Verify that the calculated value satisfies the clearance specification.

13. Inspect the reverse clutch operation.

- (1) Install the 2-4 brake drum to the end cover.
 (2) Inspect the reverse clutch operation by applying compressed air as shown.

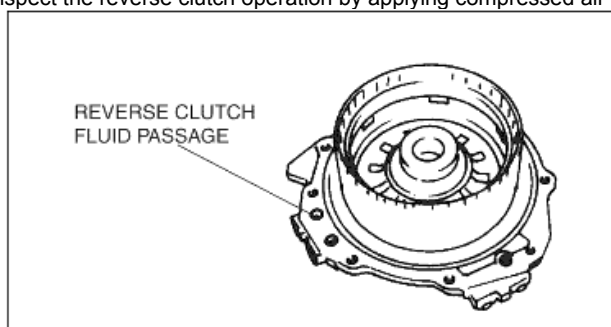

A6E5714A042


Air pressure
392-441 kPa {4.0-4.5 kgf/cm², 57-63 psi}

14. Install the 3-4 clutch.

Caution


- Installing the 3-4 clutch piston may damage its seal. Carefully install the 3-4 clutch piston by pushing evenly around the circumference.

- (1) Apply ATF to the circumference of the 3-4 clutch piston seal, and install the piston in to the 3-4 clutch drum.
- (2) Install the spring and retainer.
- (3) Apply ATF to the 3-4 seal plate, and install it onto the 3-4 clutch drum.

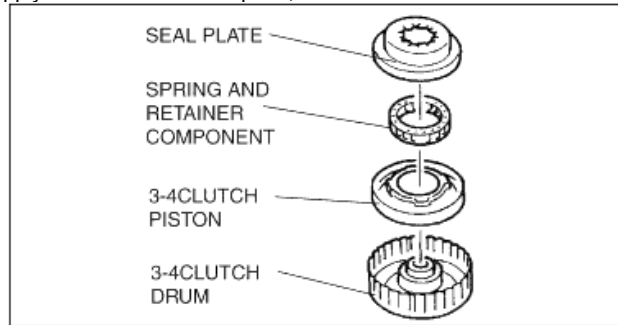

A6E5714A044

- (4) Install the **SST** as shown.

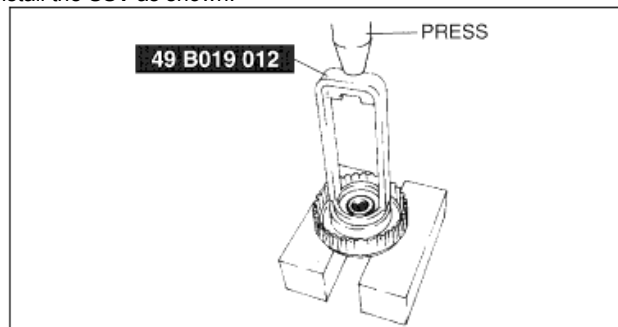


A6E5714A045

Caution

- Depress the 3-4 seal plate only enough to install the snap ring. Overpressing will damage the 3-4 seal plate assembly edges.

- (5) Compress the spring and retainer component and 3-4 seal plate.
- (6) Install the snap ring.
- (7) Remove the **SST**.
- (8) Install the drive and driven plates in the following order.
Driven-Drive-Driven-Drive-Driven-Drive
- (9) Install the retaining plate.

DRIVE PLATE PART NUMBER:FN11 19 370

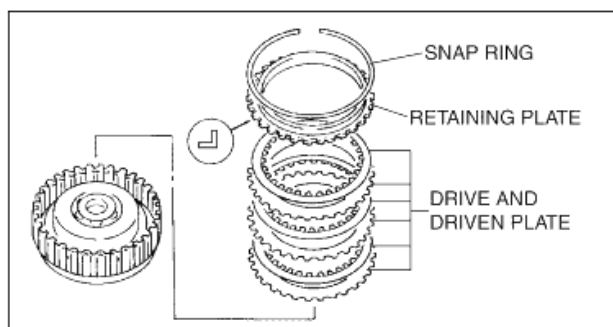


A6E5714A046

DRIVE PLATE PART NUMBER:FNE1 19 370


15. Measure the 3-4 clutch clearance.

- (1) Install the 3-4 clutch in the end cover, and set the dial gauge.
- (2) Secure the 3-4 clutch by lightly pressing down with a press, etc.

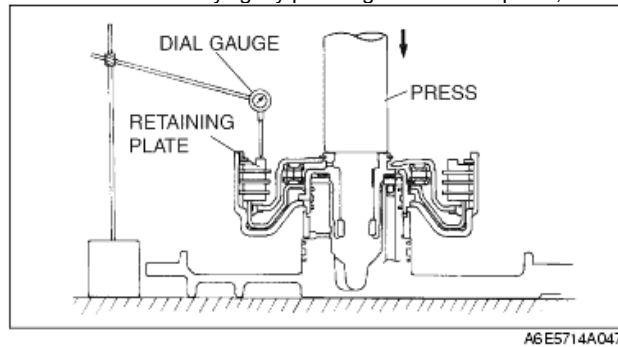

A6E5714A047

- (3) Apply compressed air to the part indicated in the figure and let the 3-4 clutch piston stroke three times.

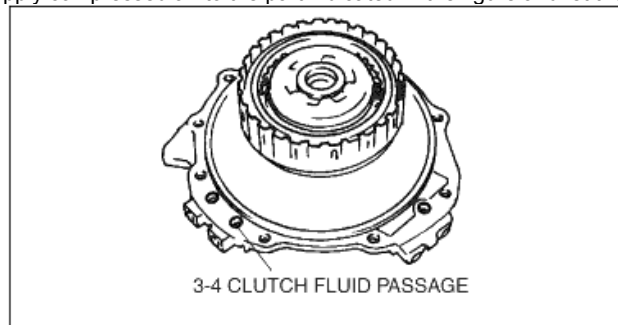


A6E5714A048

Air pressure

392-441 kPa {4.0-4.5 kgf/cm², 57-63 psi}

- (4) Apply compressed air and operate the 3-4 clutch piston. Read the value when the indicator of the dial gauge stops.
- (5) Release the compressed air and read the dial gauge when the 3-4 clutch piston is not operating.
- (6) Calculate the 3-4 clutch clearance according to the following formula:
step (4) value - step (5) value = 3-4 clutch clearance.
- (7) Measure the clearances at four locations (90° apart) by following the steps from (3) to (6). Verify that the average value is within the specification below.

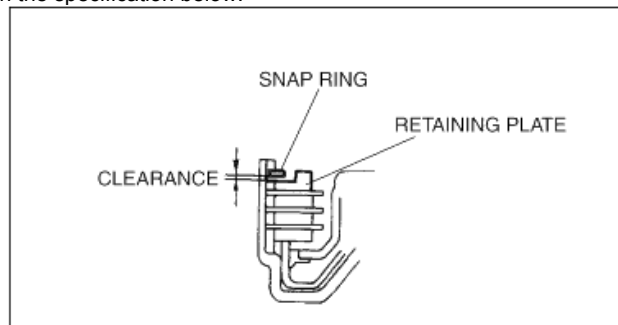

A6E5714A049

3-4 clutch clearance

Drive plate part number : FN11 19 370

1.00-1.30 mm {0.039-0.051 in}

Drive plate part number : FNE1 19 370

1.10-1.40 mm {0.043-0.055 in}

- (8) If not as specified, remove the snap ring and measure its thickness.
- (9) Add the thickness to the average value calculated in step (7), and select the snap ring whose range includes the value.

Snap ring sizes


Range mm {in}		Snap ring sizes mm {in}
Drive plate part number:FN11 19 370	Drive plate part number:FNE1 19 370	
2.250-2.450 {0.089-0.096}	2.350-2.550 {0.093-0.100}	1.2 {0.047}
2.450-2.650 {0.096-0.104}	2.550-2.750 {0.100-0.108}	1.4 {0.055}
2.650-2.850 {0.104-0.112}	2.750-2.950 {0.108-0.116}	1.6 {0.063}
2.850-3.050 {0.112-0.120}	2.950-3.150 {0.116-0.124}	1.8 {0.071}
3.050-3.250 {0.120-0.128}	3.150-3.350 {0.124-0.132}	2.0 {0.079}

3.250-3.450 {0.128-0.136}	3.350-3.550 {0.132-0.140}	2.2 {0.087}
---------------------------	---------------------------	-------------

(10) Install the selected snap ring and perform steps (2) to (7) again. Verify that the calculated value satisfies the clearance specification.

16. Inspect the 3-4 clutch operation.


- (1) Install the 3-4 clutch drum to the end cover.
- (2) Inspect the 3-4 clutch operation by applying compressed air as shown.

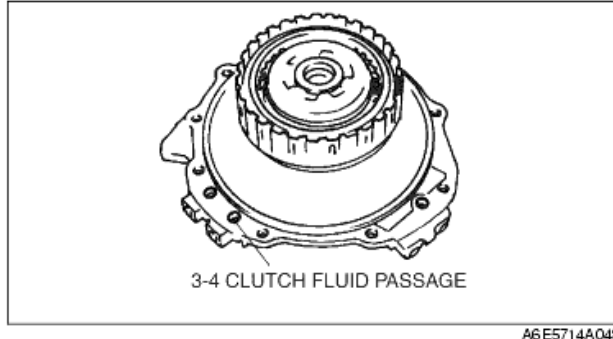


Air pressure
392-441 kPa {4.0-4.5 kgf/cm², 57-63 psi}

17. Install the 3-4 clutch component to the 2-4 brake drum.

18. Apply petroleum jelly to the bearing, and secure it onto the 3-4 clutch component.

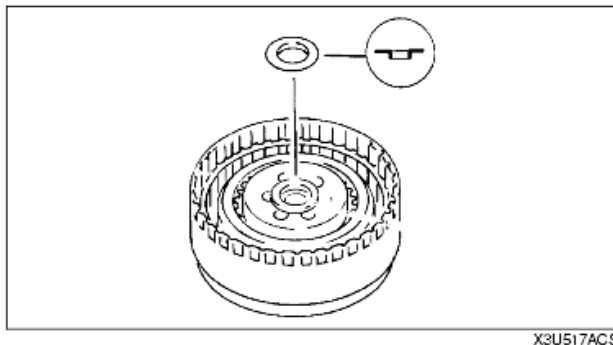

19. Install the 3-4 clutch hub.

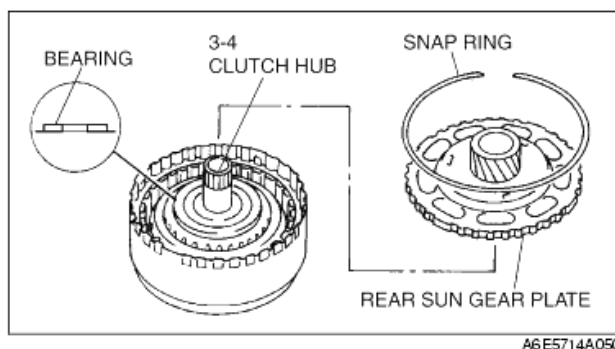

20. Apply petroleum jelly to the bearing, and secure it onto the 3-4 clutch hub as shown in the figure.

21. Install the rear sun gear plate onto the 2-4 brake drum.

22. Install the snap ring.