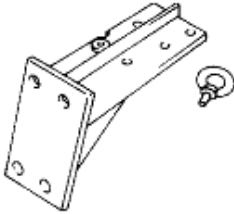
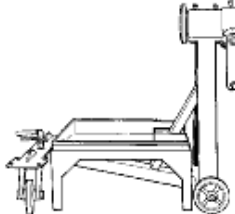
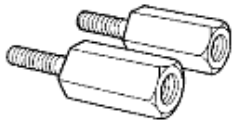
 
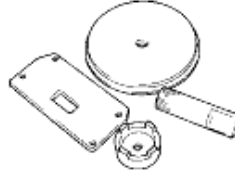


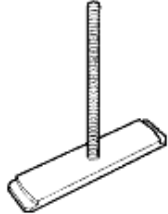
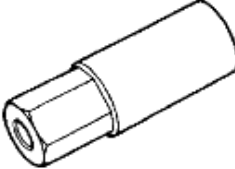


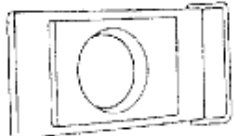
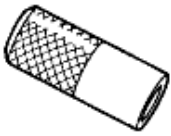
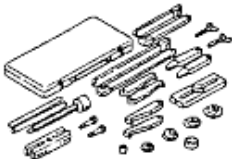
 
 



AUTOMATIC TRANSAXLE

A6E941001024A01

49 B019 010 Transmission Hanger		49 0107 680A Engine Stand		49 B019 009 Adapter	
49 0378 390 Oil Pump Puller		49 B019 0A1 Lock Nut Remover Set		49 W032 2A0 Bearing Remover Set	
49 B019 012 Return Spring Compressor		49 G019 027 Attachment A		49 G019 029 Nut	
49 W019 002 Body		49 B017 209 Attachment J		49 F401 366A Plate	
49 G030 160 Valve Seal Pusher		49 0839 425C Bearing Puller Set		49 B019 014 Removing Plate	
49 S231 626 Support Block		49 G030 338 Attachment E		49 G030 455 Diff. Side Gear Holder	