

POWER FLOW OUTLINE

B3E051701030A06

- In the powertrain mechanism, hydraulic pressure is transported from the control valves or shift solenoid A, B, or C (duty cycle type) to operate the clutches and brakes, and the planetary gear changes the gear ratio according to the vehicle driving condition.