

CENTRIFUGAL BALANCE CLUTCH STRUCTURE

B3E051701030A12

- Centrifugal balance clutch chambers are installed opposite the clutch chamber. The centrifugal balance clutch chambers are constantly filled with ATF from an exclusive hydraulic passage of the turbine shaft.