

2-4 BRAKE BAND STRUCTURE

B3E051701030A15

- The 2-4 brake band is set to wind the 2-4 brake drum and one end of the 2-4 brake band is fixed with a band strut. The servo piston is in the transaxle case.