

- [!\[\]\(1207edb9a08751d3d55970560645ed23\_img.jpg\) AUTOMATIC TRANSAXLE OUTLINE](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36\_img.jpg\) AUTOMATIC TRANSAXLE FEATURES](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9\_img.jpg\) AUTOMATIC TRANSAXLE CROSS-SECTIONAL VIEW](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec\_img.jpg\) OUTLINE OF OPERATION](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a\_img.jpg\) EC-AT OPERATION CHART](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622\_img.jpg\) TORQUE CONVERTER OUTLINE](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba\_img.jpg\) TORQUE CONVERTER STRUCTURE](#)
- [!\[\]\(ede41f318336daae6cce8449321d11ea\_img.jpg\) POWER FLOW OUTLINE](#)
- [!\[\]\(b0cd9d88e5935e4c3891570bfdded05c\_img.jpg\) POWER FLOW STRUCTURE](#)
- [!\[\]\(81bb4e52f43acc06353225c332f66031\_img.jpg\) POWER FLOW OPERATION](#)
- [!\[\]\(4862a3d83a50b6aa02d9ef677ec36116\_img.jpg\) FORWARD CLUTCH, 3-4 CLUTCH, REVERSE CLUTCH, LOW AND REVERSE BRAKE OUTLINE](#)
- [!\[\]\(b564abb3972f4216a833af91832e1619\_img.jpg\) FORWARD CLUTCH, 3-4 CLUTCH, REVERSE CLUTCH, LOW AND REVERSE BRAKE OPERATION](#)
- [!\[\]\(3e91863309aa91e589b5ab92c8ebd53f\_img.jpg\) CENTRIFUGAL BALANCE CLUTCH OUTLINE](#)
- [!\[\]\(bf6def3f21dfdb4b0473718404626f2c\_img.jpg\) CENTRIFUGAL BALANCE CLUTCH STRUCTURE](#)
- [!\[\]\(b0485233f98b941f2381b77fe3b6686f\_img.jpg\) CENTRIFUGAL BALANCE CLUTCH OPERATION](#)
- [!\[\]\(fd5c36680d4471e605732b36788643ca\_img.jpg\) 2-4 BRAKE BAND OUTLINE](#)
- [!\[\]\(cfcb6e3fe14cf2366208370376c5c0f9\_img.jpg\) 2-4 BRAKE BAND STRUCTURE](#)
- [!\[\]\(17fbea93b96fb691279feb16b3dfba47\_img.jpg\) 2-4 BRAKE BAND OPERATION](#)
- [!\[\]\(c943c40aac9d4dd9481d8d4b932db11b\_img.jpg\) ONE-WAY CLUTCH OUTLINE](#)
- [!\[\]\(78722dd8a40b4b8cba6c4bc2496af0ff\_img.jpg\) ONE-WAY CLUTCH STRUCTURE](#)
- [!\[\]\(7ca57550f01dd657cd5fb0b4b39070e5\_img.jpg\) ONE-WAY CLUTCH OPERATION](#)
- [!\[\]\(27d08d42762e05345080235dfb8fd4f5\_img.jpg\) PLANETARY GEAR OUTLINE](#)
- [!\[\]\(a0120eed5345e3ef041f32d510bbaaa4\_img.jpg\) PLANETARY GEAR STRUCTURE](#)
- [!\[\]\(5d135eaf0db5ba5bb50522e31d409887\_img.jpg\) PLANETARY GEAR OPERATION](#)
- [!\[\]\(999a3b623d1b2e259ce371a576a89b57\_img.jpg\) PARKING MECHANISM OUTLINE](#)
- [!\[\]\(b6fcbc36e74bb8f6df2b3fdc5d230a1a\_img.jpg\) PARKING MECHANISM STRUCTURE](#)
- [!\[\]\(32a22410411096e2c8d32731f78c9ccc\_img.jpg\) PARKING MECHANISM OPERATION](#)
- [!\[\]\(c0c9b82c73e1cc6d7e87bf54578e2a82\_img.jpg\) OUTPUT GEAR OUTLINE](#)
- [!\[\]\(3a6ac41b3f099dd17a52d14a1994c5e3\_img.jpg\) OIL PUMP OUTLINE](#)
- [!\[\]\(d8728fc7d0d18b43bb799e0b75e28476\_img.jpg\) OIL PUMP STRUCTURE](#)
- [!\[\]\(70bb55f7aa836a2ee4c67662da4967eb\_img.jpg\) OIL PUMP OPERATION](#)
- [!\[\]\(b2232297cce97c56f57b421760817d12\_img.jpg\) FORWARD CLUTCH, 3-4 CLUTCH HYDRAULIC CIRCUIT OUTLINE](#)
- [!\[\]\(55709881e7481dfc15adc40dcd59becf\_img.jpg\) CONTROL VALVE BODY OUTLINE](#)
- [!\[\]\(8d83d449d7624cdb4d2f61b11873010a\_img.jpg\) SHIFT SOLENOID A, B AND C \(DUTY-CYCLE TYPE\) OUTLINE](#)
- [!\[\]\(08e72e8a418b20d39ee1ac7f725378d8\_img.jpg\) SHIFT SOLENOID A, B AND C \(DUTY-CYCLE TYPE\) FUNCTION](#)
- [!\[\]\(1472b7e8436c1b3bc5eeea25b271593e\_img.jpg\) SHIFT SOLENOID A, B AND C \(DUTY-CYCLE TYPE\) OPERATION](#)
- [!\[\]\(57e556a88107516655813e6c23d2abae\_img.jpg\) SHIFT SOLENOID D, AND E \(ON/OFF TYPE\) OUTLINE](#)
- [!\[\]\(c030b7e6eb2494eaedb757293e6adf2c\_img.jpg\) SHIFT SOLENOID D, AND E \(ON/OFF TYPE\) FUNCTION](#)
- [!\[\]\(5bad85d70f3eb6f5fbcfc80073eb6615\_img.jpg\) SHIFT SOLENOID D, AND E \(ON/OFF TYPE\) OPERATION](#)
- [!\[\]\(1809a30bd9cc86d1611d658a2943747d\_img.jpg\) PRESSURE CONTROL SOLENOID \(LINEAR TYPE\) OUTLINE](#)
- [!\[\]\(ebce444f4bff1003b265f30c0e6b85ba\_img.jpg\) PRESSURE CONTROL SOLENOID \(LINEAR TYPE\) OPERATION](#)
- [!\[\]\(8e0f7d31a6b42179701b60b1a6e779d2\_img.jpg\) AUTOMATIC TRANSAXLE CLEANING](#)
- [!\[\]\(9a27f7f6603fb7c664d1a82b91188a1b\_img.jpg\) AUTOMATIC TRANSAXLE DISASSEMBLY](#)
- [!\[\]\(1b742e4ee6400795e0df67c7dfb0086a\_img.jpg\) ACCUMULATORS DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(0e9bbe3ce0b63cba3e62e7505c75b23d\_img.jpg\) OIL PUMP DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(b2a85a2d36bbfb78243c2f3a3b713215\_img.jpg\) FORWARD CLUTCH DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(57bf822198782e0d369418c7fa79597a\_img.jpg\) CLUTCH COMPONENT DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(4aef421f48e50ead6f550d3ebb37791f\_img.jpg\) FRONT INTERNAL GEAR ONE-WAY CLUTCH COMPONENT DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(b874be678b40627c3fd867c598d84ba0\_img.jpg\) BAND SERVO DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(60120098c63d9dcc2f1488927d63058f\_img.jpg\) LOW AND REVERSE BRAKE AND ONE-WAY CLUTCH INNER RACE DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(67e846cf4ac8a4c0ff229459c1450837\_img.jpg\) PARKING MECHANISM DISASSEMBLY/ASSEMBLY](#)

- [!\[\]\(467d80e979964f7f8c752fb22248b5b7\_img.jpg\) SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(b71552d33dbf62adf5e5199a70ee02bf\_img.jpg\) PRIMARY GEAR DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(03134b765d1473836ff001925b1b0550\_img.jpg\) CONTROL VALVE BODY DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(aed6947356668967079310026052edc0\_img.jpg\) DIFFERENTIAL DISASSEMBLY/ASSEMBLY](#)
- [!\[\]\(e61aeb0d9066d5d9e54d9b655f50da3d\_img.jpg\) SECONDARY GEAR BEARING PRELOAD](#)
- [!\[\]\(f7af41ce0777e13bda91fa715111c02a\_img.jpg\) DIFFERENTIAL BEARING PRELOAD](#)
- [!\[\]\(476ddb2354d4ad1cb23a2236b1e49873\_img.jpg\) AUTOMATIC TRANSAXLE ASSEMBLY](#)
- [!\[\]\(1d505a46c82c5cefa23b88c2eee900ce\_img.jpg\) AUTOMATIC TRANSAXLE INSPECTION](#)