


DIFFERENTIAL DISASSEMBLY

A6E511227100M02

1. Disassemble in the order shown in the figure.

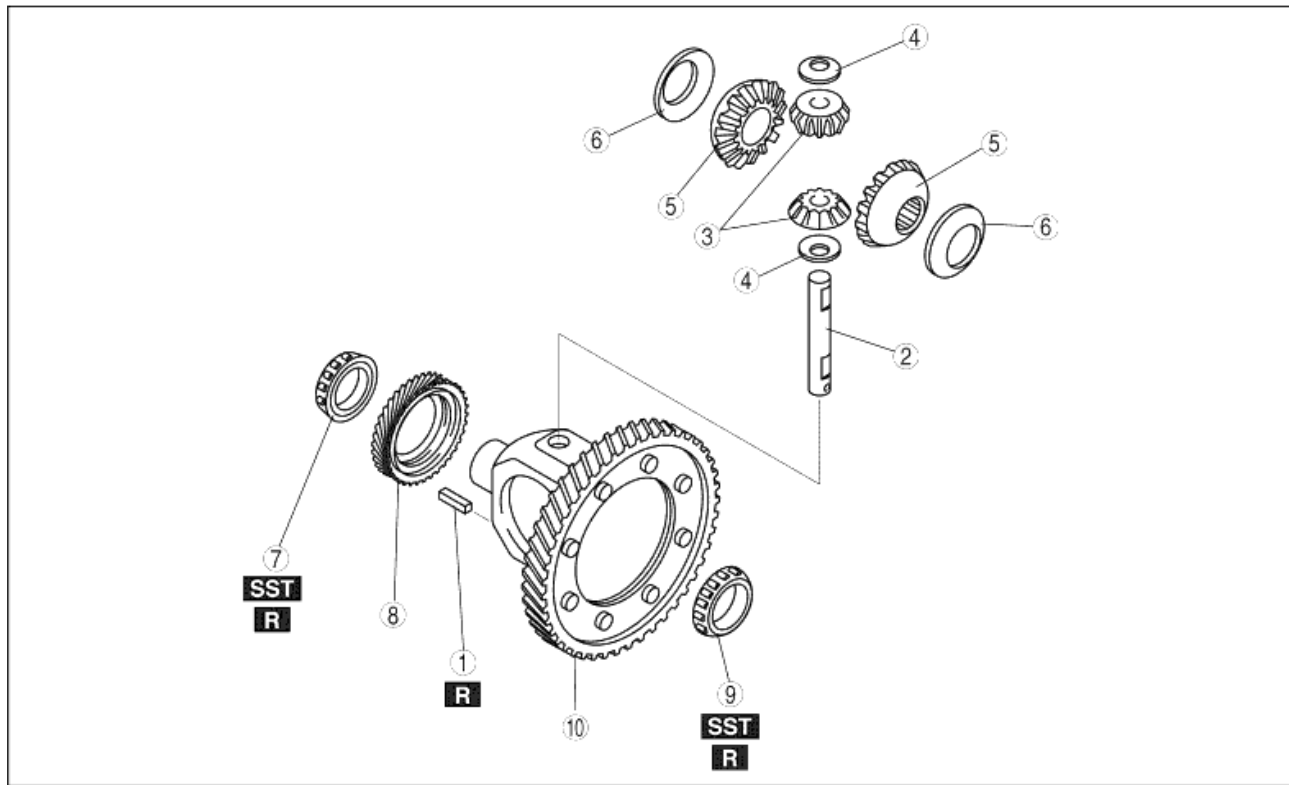

Z4F5112M061

| | |
|----|--|
| 1 | Roll pin |
| 2 | Pinion shaft |
| 3 | Pinion gear |
| 4 | Thrust washer |
| 5 | Side gear |
| 6 | Thrust washer |
| 7 | Bearing (side opposite ring gear) (See Bearing (Side Opposite Ring Gear) Disassembly Note) |
| 8 | Speedometer drive gear |
| 9 | Bearing (ring gear side) (See Bearing (Ring Gear Side) Disassembly Note) |
| 10 | Ring gear and gear case component |

Bearing (Side Opposite Ring Gear) Disassembly Note

1. Remove the bearing using the **SSTs**.

Bearing (Ring Gear Side) Disassembly Note

1. Remove the bearing using the **SST**.

