


# DIFFERENTIAL DISASSEMBLY

B3E051527100102

1. Disassemble in the order indicated in the table.

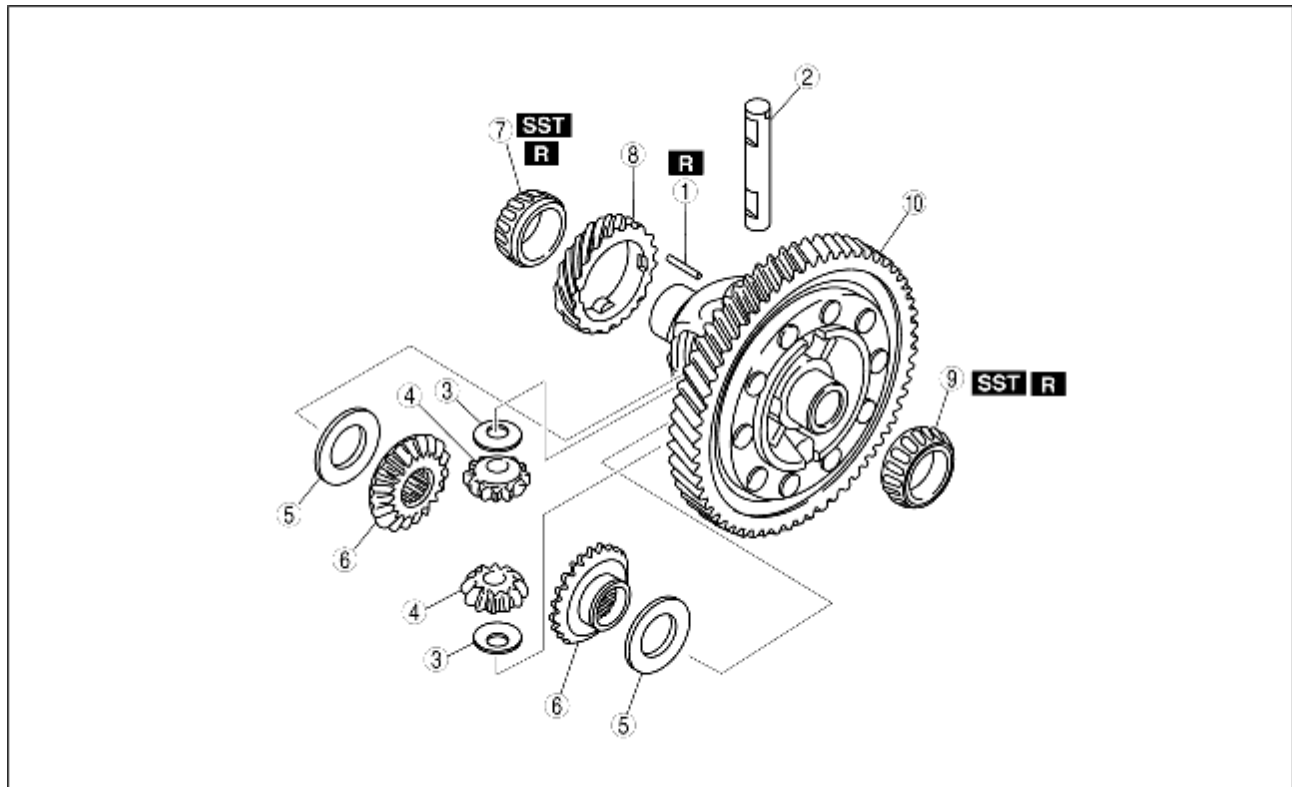

ADJ5113M045


1	Roll pin
2	Pinion shaft
3	Thrust washer
4	Pinion gear
5	Thrust washer
6	Side gear
7	Bearing (side opposite ring gear) (See <a href="#">Bearing (Side Opposite Ring Gear) Disassembly Note.</a> )
8	Speedometer drive gear
9	Bearing (ring gear side) (See <a href="#">Bearing (Ring Gear Side) Disassembly Note.</a> )
10	Ring gear and gear case component

## Bearing (Side Opposite Ring Gear) Disassembly Note

1. Remove the bearing using the SSTs.

## Bearing (Ring Gear Side) Disassembly Note

1. Remove the bearing using the **SST**.

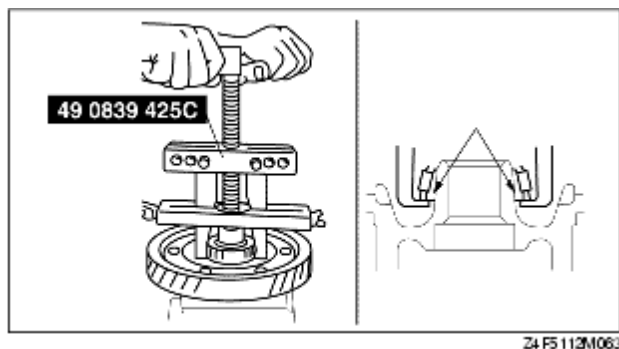

Z4 F5113M063