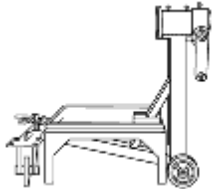
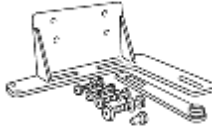
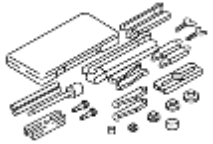
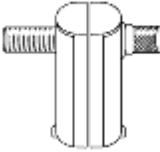
 
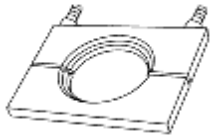
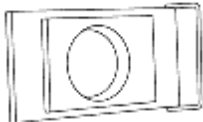
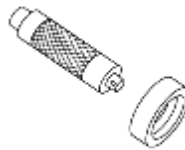
 
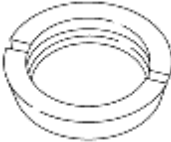
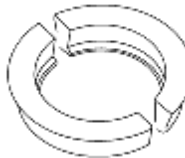

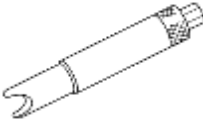
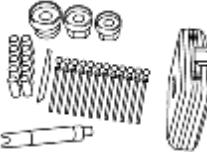
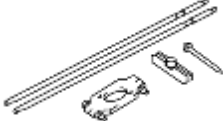


MANUAL TRANSAXLE

B3E056001029101

49 0107 680A Engine stand		49 G019 0A0 Transaxle hanger set		49 0839 425C Bearing puller set	
49 FT01 361 Bearing remover		49 0636 145 Fan pulley boss puller		49 G030 370 Removing plate	
49 F401 366A Plate		49 G030 795 Oil seal installer		49 F401 440 Primary shaft holder	
49 B017 203 Attachment C		49 B017 205 Attachment E		49 H010 401 Oil seal installer	
49 T027 001 Preload adapter		49 D017 2A2A Shim selector set		49 0187 520 Rear axle shaft bearing puller	
49 F401 330B Bearing installer set	