


DIFFERENTIAL DISASSEMBLY

B3E051501029M06

1. Disassemble in the order indicated in the table.

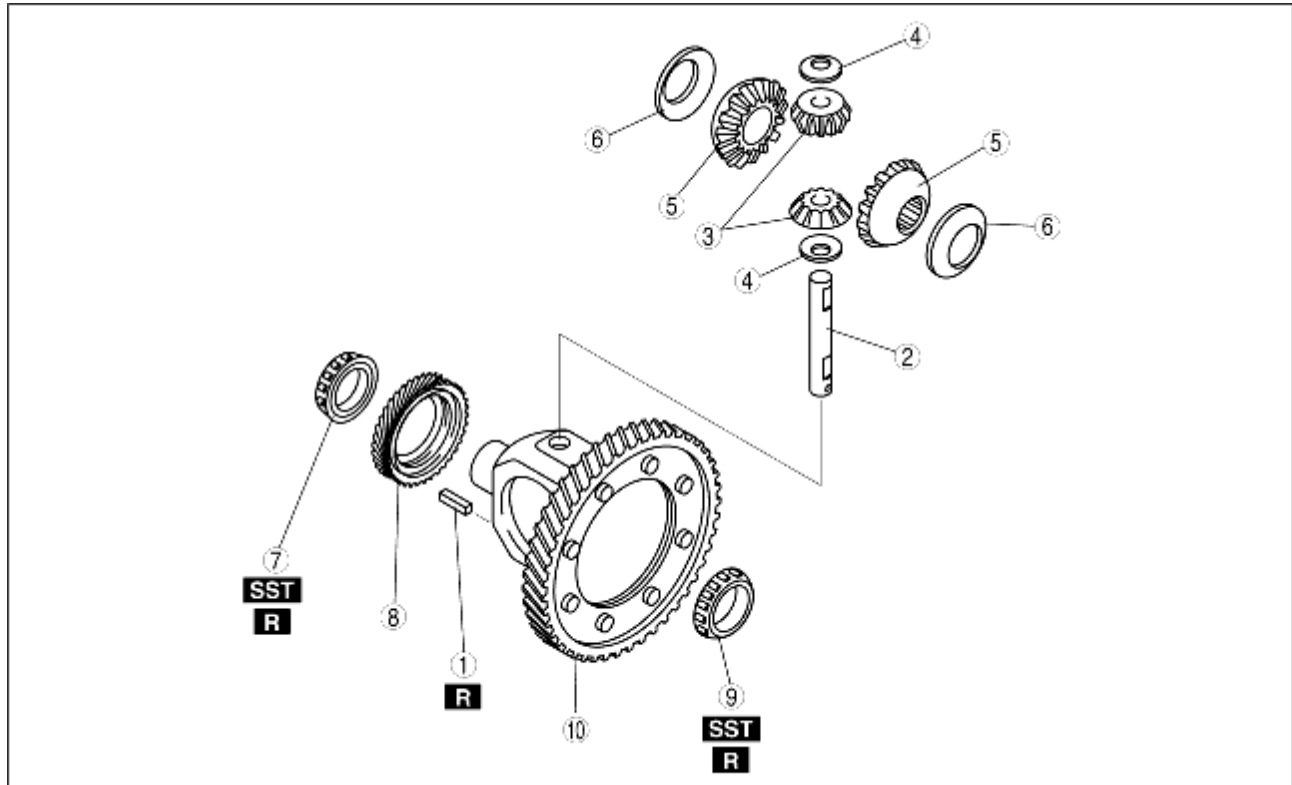

24 F5113M061


1	Roll pin
2	Pinion shaft
3	Pinion gear
4	Thrust washer
5	Side gear
6	Thrust washer
7	Bearing (side opposite ring gear) (See Bearing (Side Opposite Ring Gear) Disassembly Note.)
8	Speedometer drive gear
9	Bearing (ring gear side) (See Bearing (Ring Gear Side) Disassembly Note.)
10	Ring gear and gear case component

Bearing (Side Opposite Ring Gear) Disassembly Note

1. Remove the bearing using the **SSTs**.

Bearing (Ring Gear Side) Disassembly Note

1. Remove the bearing using the **SST**.

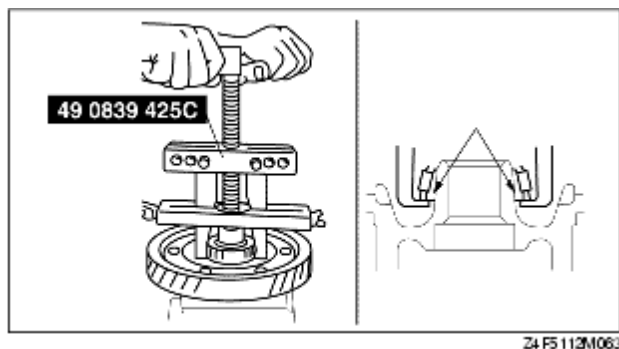

Z4 F5113M063