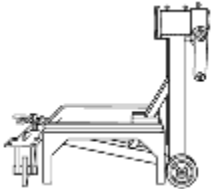
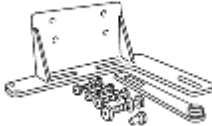
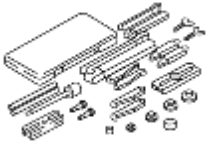
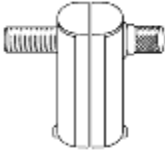
 
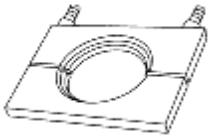
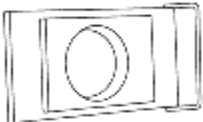
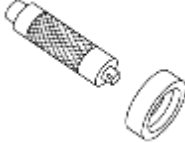
 
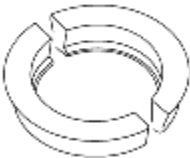
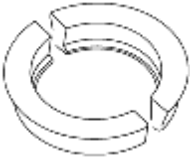
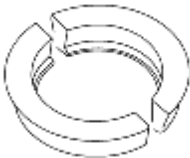
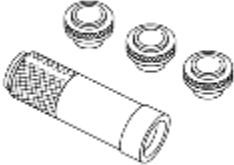
 
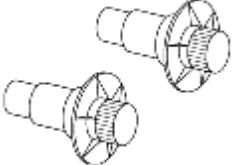

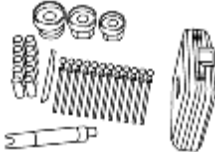


SERVICE TOOLS

B3E056001029M01

49 0107 680A Engine stand		49 G019 0A0 Transaxle hanger set		49 0839 425C Bearing puller set	
49 FT01 361 Bearing remover		46 0636 145 Fan pulley boss puller		49 G030 370 Removing plate	
49 F401 366A Plate		49 G030 795 Oil seal installer		49 G030 440 Primary shaft holder	
49 B017 207 Attachment G		49 B017 208 Attachment H		49 B017 209 Attachment J	
49 F401 330B Bearing installer set		49 B017 102 Preload adapter		49 G030 455 Differential side gear holder	
49 G030 338 Attachment E		49 G030 380D Shim selector set		49 G017 202 Preload adapter	