

HOW TO USE THIS MANUAL

B3E00000001T01

Vehicle Identification Number (VIN) Code

J M Z B K 1 4 6 2 0 # 1 2 3 4 5 6											
										Serial No.	
										Plant	
										0= Hiroshima 1= Hofu	
										for Europe-RHD: Dummy for Israel: Model year for Others: Dummy	
										0 4=2004 0 to 9 (Same as model year-Israel)	
										Transaxle	
										2= 5MTX 5= 4ATX	
										Engine type	
										J= ZJ Z= Z6 F= LF	
										Body style	
										2= 4SD 4= 5HB	
										Drive axle	
										1= 4x2	
										Vehicle type	
										BK= Mazda3	
										World manufacturer identification	
										JMZ= European (L.H.D. U.K.)	

B3E0000T050