

## DTC TABLE [LF]

B3E010200102W11

×: Applicable  
-: Not applicable

DTC No.	Condition	MIL	DC	Monitor item	Memory function	Page
P0031	Front HO2S heater circuit low input	ON	2	HO2S heater	×	(See <a href="#">DTC P0031 [LF]</a> )
P0032	Front HO2S heater circuit high input	ON	2	HO2S heater	×	(See <a href="#">DTC P0032 [LF]</a> )
P0037	Rear HO2S heater circuit low input	ON	2	HO2S heater	×	(See <a href="#">DTC P0037 [LF]</a> )
P0038	Rear HO2S heater circuit high input	ON	2	HO2S heater	×	(See <a href="#">DTC P0038 [LF]</a> )
P0101	MAF sensor circuit range/performance problem	ON	2	CCM	×	(See <a href="#">DTC P0101 [LF]</a> )
P0102	MAF sensor circuit low input	ON	1	CCM	×	(See <a href="#">DTC P0102 [LF]</a> )
P0103	MAF sensor circuit high input	ON	1	CCM	×	(See <a href="#">DTC P0103 [LF]</a> )
P0107	MAP sensor circuit low input	ON	1	CCM	×	(See <a href="#">DTC P0107 [LF]</a> )
P0108	MAP sensor circuit high input	ON	1	CCM	×	(See <a href="#">DTC P0108 [LF]</a> )
P0111	IAT sensor circuit range/performance problem	ON	2	CCM	×	(See <a href="#">DTC P0111 [LF]</a> )
P0112	IAT sensor circuit low input	ON	1	CCM	×	(See <a href="#">DTC P0112 [LF]</a> )
P0113	IAT sensor circuit high input	ON	1	CCM	×	(See <a href="#">DTC P0113 [LF]</a> )
P0117	ECT sensor circuit low input	ON	1	CCM	×	(See <a href="#">DTC P0117 [LF]</a> )
P0118	ECT sensor circuit high input	ON	1	CCM	×	(See <a href="#">DTC P0118 [LF]</a> )
P0121	TP sensor stuck closed	ON	2	CCM	×	(See <a href="#">DTC P0121 [LF]</a> )
P0122	TP sensor circuit low input	ON	1	CCM	×	(See <a href="#">DTC P0122 [LF]</a> )
P0123	TP sensor circuit high input	ON	1	CCM	×	(See <a href="#">DTC P0123 [LF]</a> )
P0125	Excessive time to enter closed loop fuel control	ON	2	CCM	×	(See <a href="#">DTC P0125 [LF]</a> )
P0132	Front HO2S circuit high input	ON	2	HO2S	×	(See <a href="#">DTC P0132 [LF]</a> )
P0133	Front HO2S circuit problem	ON	2	HO2S	×	(See <a href="#">DTC P0133 [LF]</a> )
P0134	Front HO2S no activity detected	ON	2	HO2S	×	(See <a href="#">DTC P0134 [LF]</a> )
P0138	Rear HO2S circuit high input	ON	2	HO2S	×	(See <a href="#">DTC P0138 [LF]</a> )

P0140	Rear HO2S no activity detected	ON	2	HO2S	×	(See <a href="#">DTC P0140 [LF]</a> )
P0300	Random misfire detected	Flash/ON	1 or 2	Misfire	×	(See <a href="#">DTC P0300 [LF]</a> )
P0301	Cylinder No.1 misfire detected	Flash/ON	1 or 2	Misfire	×	(See <a href="#">DTC P0301, P0302, P0303, P0304 [LF]</a> )
P0302	Cylinder No.2 misfire detected	Flash/ON	1 or 2	Misfire	×	
P0303	Cylinder No.3 misfire detected	Flash/ON	1 or 2	Misfire	×	
P0304	Cylinder No.4 misfire detected	Flash/ON	1 or 2	Misfire	×	
P0327	KS circuit low input	ON	1	CCM	×	(See <a href="#">DTC P0327 [LF]</a> )
P0328	KS circuit high input	ON	1	CCM	×	(See <a href="#">DTC P0328 [LF]</a> )
P0335	CKP sensor circuit problem	ON	1	CCM	×	(See <a href="#">DTC P0335 [LF]</a> )
P0340	CMP sensor circuit problem	ON	1	CCM	×	(See <a href="#">DTC P0340 [LF]</a> )
P0403	EGR valve (stepper motor) circuit problem	ON	2	CCM	×	(See <a href="#">DTC P0403 [LF]</a> )
P0420	Catalyst system efficiency below threshold	ON	2	Catalyst	×	(See <a href="#">DTC P0420 [LF]</a> )
P0443	Purge solenoid valve circuit problem	ON	2	CCM	×	(See <a href="#">DTC P0443 [LF]</a> )
P0480	Cooling fan control circuit problem	OFF	1	Other	×	(See <a href="#">DTC P0480 [LF]</a> )
P0500	VSS circuit problem	ON	2	CCM	×	(See <a href="#">DTC P0500 [LF]</a> )
P0505	IAC system problem	OFF	-	Other	-	(See <a href="#">DTC P0505 [LF]</a> )
P0506	Idle control system RPM lower than expected	ON	2	CCM	×	(See <a href="#">DTC P0506 [LF]</a> )
P0507	Idle control system RPM higher than expected	ON	2	CCM	×	(See <a href="#">DTC P0507 [LF]</a> )
P0511	IAC valve circuit problem	ON	1	CCM	×	(See <a href="#">DTC P0511 [LF]</a> )
P0602	PCM programming error	ON	1	CCM	×	(See <a href="#">DTC P0602 [LF]</a> )
P0610	PCM vehicle options error	ON	1	CCM	×	(See <a href="#">DTC P0610 [LF]</a> )
P0661	Variable intake-air solenoid valve circuit low input	OFF	1	Other	×	(See <a href="#">DTC P0661 [LF]</a> )
P0662	Variable intake-air solenoid valve circuit high input	OFF	1	Other	×	(See <a href="#">DTC P0662 [LF]</a> )
P0703	Brake switch input circuit problem	ON	2	CCM	×	(See <a href="#">DTC P0703 [LF]</a> )
P0704	CPP switch input circuit problem	ON	2	CCM	×	(See <a href="#">DTC P0704 [LF]</a> )
P0706	Transaxle range (TR) switch circuit range/performance	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0707	Transaxle range (TR) switch circuit low input	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				

P0708	Transaxle range (TR) switch circuit high input	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0711	Transaxle fluid temperature (TFT) sensor circuit range/performance (stuck)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0712	Transaxle fluid temperature (TFT) sensor circuit malfunction (short to ground)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0713	Transaxle fluid temperature (TFT) sensor circuit malfunction (open circuit)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0715	Input/turbine speed sensor circuit malfunction	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0731	Gear 1 incorrect (incorrect gear ratio detected)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0732	Gear 2 incorrect (incorrect gear ratio detected)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0733	Gear 3 incorrect (incorrect gear ratio detected)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0734	Gear 4 incorrect (incorrect gear ratio detected)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0741	Torque converter clutch (TCC) (stuck off)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0742	Torque converter clutch (TCC) (stuck on)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0745	Pressure control solenoid malfunction	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0751	Shift solenoid A stuck off	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0752	Shift solenoid A stuck on	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0753	Shift solenoid A malfunction (electrical)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0756	Shift solenoid B stuck off	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0757	Shift solenoid B stuck on	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0758	Shift solenoid B malfunction (electrical)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0761	Shift solenoid C stuck off	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0762	Shift solenoid C stuck on	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0763	Shift solenoid C malfunction (electrical)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0766	Shift solenoid D stuck off	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0767	Shift solenoid D stuck on	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0768	Shift solenoid D malfunction (electrical)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0771	Shift solenoid E stuck off	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0772	Shift solenoid E stuck on	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0773	Shift solenoid E malfunction (electrical)	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P0850	Neutral switch input circuit problem	ON	2	CCM	×	(See <a href="#">DTC P0850 [LF]</a> )
P0894	Forward clutch torque transmission	(See <a href="#">DTC TABLE [FN4A-EL].</a> )				
P1260	Immobilizer system problem	OFF	1	Other	×	(See <a href="#">DTC P1260 [LF]</a> )
P2006	Variable tumble shutter valve stuck	ON	2	CCM	×	(See <a href="#">DTC P2006</a> )

	closed					[LF])
P2009	Variable tumble solenoid valve circuit low input	ON	2	CCM	×	(See <a href="#">DTC P2009 [LF]</a> )
P2010	Variable tumble solenoid valve circuit high input	ON	2	CCM	×	(See <a href="#">DTC P2010 [LF]</a> )
P2096	Target A/F feedback system too lean	ON	2	Fuel system	×	(See <a href="#">DTC P2096 [LF]</a> )
P2097	Target A/F feedback system too rich	ON	2	Fuel system	×	(See <a href="#">DTC P2097 [LF]</a> )
P2177	Fuel system too lean at off idle	ON	2	Fuel system	×	(See <a href="#">DTC P2177 [LF]</a> )
P2178	Fuel system too rich at off idle	ON	2	Fuel system	×	(See <a href="#">DTC P2178 [LF]</a> )
P2187	Fuel system too lean at idle	ON	2	Fuel system	×	(See <a href="#">DTC P2187 [LF]</a> )
P2188	Fuel system too rich at idle	ON	2	Fuel system	×	(See <a href="#">DTC P2188 [LF]</a> )
P2195	Front HO2S signal stuck lean	ON	2	HO2S	×	(See <a href="#">DTC P2195 [LF]</a> )
P2196	Front HO2S signal stuck rich	ON	2	HO2S	×	(See <a href="#">DTC P2196 [LF]</a> )
P2228	BARO sensor circuit low input	ON	1	CCM	×	(See <a href="#">DTC P2228 [LF]</a> )
P2229	BARO sensor circuit high input	ON	1	CCM	×	(See <a href="#">DTC P2229 [LF]</a> )
P2502	Charging system voltage problem	OFF	1	Other	×	(See <a href="#">DTC P2502 [LF]</a> )
P2503	Charging system voltage low	OFF	1	Other	×	(See <a href="#">DTC P2503 [LF]</a> )
P2504	Charging system voltage high	OFF	1	Other	×	(See <a href="#">DTC P2504 [LF]</a> )
P2507	PCM B+ voltage low	ON	1	CCM	×	(See <a href="#">DTC P2507 [LF]</a> )
U0073	CAN system communication error	(See <a href="#">DTC TABLE [MULTIPLEX COMMUNICATION SYSTEM]</a> )				
U0121	Communication error to ABS HU/CM	(See <a href="#">DTC TABLE [MULTIPLEX COMMUNICATION SYSTEM]</a> )				
U0155	Communication error to instrument cluster	(See <a href="#">DTC TABLE [MULTIPLEX COMMUNICATION SYSTEM]</a> )				