

NO.1 MELTING OF MAIN OR OTHER FUSES [LF]

B3E010318881W03

1	MELTING OF MAIN OR OTHER FUSES
[TROUBLESHOOTING HINTS]	
Inspect condition of fuse.	

Damaged fuse	Related wiring harness
IG KEY1 (30 A)	IG KEY1 fuse <ul style="list-style-type: none"> • Ignition switch - ENGINE fuse
ENGINE (20 A)	ENGINE fuse <ul style="list-style-type: none"> • Main relay • Ignition coil No.1 • Ignition coil No.2 • Ignition coil No.3 • Ignition coil No.4 • Condenser
IG KEY2 (30 A)	IG KEY2 fuse <ul style="list-style-type: none"> • Ignition switch
ENG +B (10 A)	ENG +B fuse <ul style="list-style-type: none"> • PCM
ENGINE (30 A)	ENGINE fuse <ul style="list-style-type: none"> • Main relay - EGI INJ1 fuse - EGI INJ2 fuse - ENG BAR1 fuse - ENG BAR2 fuse
EGI INJ1 (10 A)	EGI INJ1 fuse <ul style="list-style-type: none"> • Fuel injector No.1 • Fuel injector No.2

	<ul style="list-style-type: none"> • Fuel injector No.3 • Fuel injector No.4
EGI INJ2 (10 A)	EGI INJ2 fuse <ul style="list-style-type: none"> • PCM
ENG BAR1 (10 A)	ENG BAR1 fuse <ul style="list-style-type: none"> • EGR valve • Variable intake-air solenoid valve • Variable tumble solenoid valve • Purge solenoid valve • MAF sensor • Fuel pump relay
ENG BAR2 (10 A)	ENG BAR2 fuse <ul style="list-style-type: none"> • HO2S (front) • HO2S (rear)
BTN (40 A)	BTN fuse <ul style="list-style-type: none"> • OBD fuse
OBD (10 A)	OBD fuse <ul style="list-style-type: none"> • DLC-2
FUEL PUMP (15 A)	FUEL PUMP fuse <ul style="list-style-type: none"> • Fuel pump relay
FAN (40 A)	FAN fuse <ul style="list-style-type: none"> • Fan control module