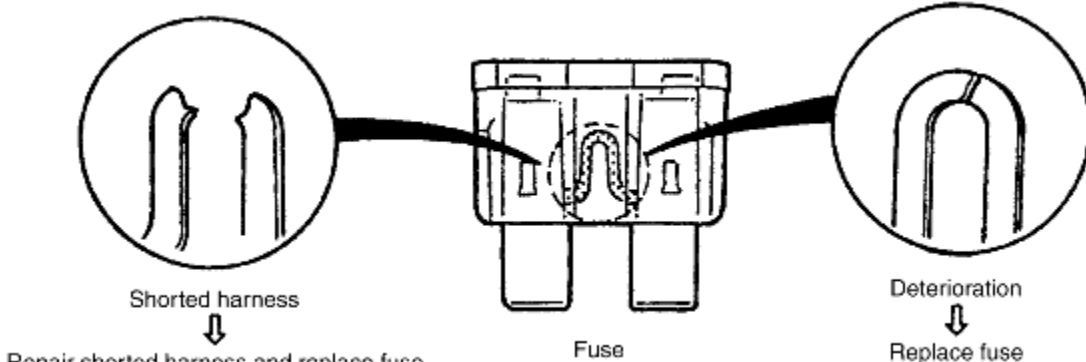


# NO.1 MELTING OF MAIN OR OTHER FUSES [ZJ, Z6]

B3E010318881W34

<b>1</b>	<b>MELTING OF MAIN OR OTHER FUSES</b>
<b>[TROUBLESHOOTING HINTS]</b>	
Inspect condition of fuse.	
	

Damaged fuse	Related wiring harness
IG KEY1 (30 A)	<b>IG KEY1 fuse</b> <ul style="list-style-type: none"> <li>• Ignition switch</li> <li>- ENGINE fuse</li> </ul>
ENGINE (20 A)	<b>ENGINE fuse</b> <ul style="list-style-type: none"> <li>• Main relay</li> </ul>
IG KEY2 (30 A)	<b>IG KEY2 fuse</b> <ul style="list-style-type: none"> <li>• Ignition switch</li> <li>- BACK fuse</li> </ul>
BACK (10 A)	<b>BACK fuse</b> <ul style="list-style-type: none"> <li>• TR switch</li> </ul>
ENG +B (10 A)	<b>ENG +B</b> <ul style="list-style-type: none"> <li>• PCM</li> </ul>
ENGINE (30 A)	<b>ENGINE fuse</b> <ul style="list-style-type: none"> <li>• Main relay</li> <li>- EGI INJ1 fuse</li> <li>- EGI INJ2 fuse</li> <li>- EGI BAR1 fuse</li> </ul>
EGI INJ1 (10 A)	<b>EGI INJ1 fuse</b> <ul style="list-style-type: none"> <li>• PCM</li> </ul>
	<b>EGI INJ2 fuse</b>

EGI INJ2 (10 A)	<ul style="list-style-type: none"> <li>• PCM</li> </ul>
ENG BAR1 (10 A)	<b>ENG BAR1 fuse</b> <ul style="list-style-type: none"> <li>• PCM</li> <li>• Fuel pump relay</li> </ul>
FUEL PUMP (15 A)	<b>FUEL PUMP fuse</b> <ul style="list-style-type: none"> <li>• Fuel pump relay</li> </ul>
FAN (40 A)	<b>FAN fuse</b> <ul style="list-style-type: none"> <li>• FAN control module</li> </ul>
BTN (40 A)	<b>BTN fuse</b> <ul style="list-style-type: none"> <li>• OBD fuse</li> </ul>
OBD (10 A)	<b>OBD fuse</b> <ul style="list-style-type: none"> <li>• DLC-2</li> </ul>