


PLUG HOLE PLATE REMOVAL/INSTALLATION [LF]

B3E011000149W01

1. Remove the plug hole plate in the order indicated in the figure.

Note

- Lift off and remove the plug hole plate from the installation areas as shown in the figure.

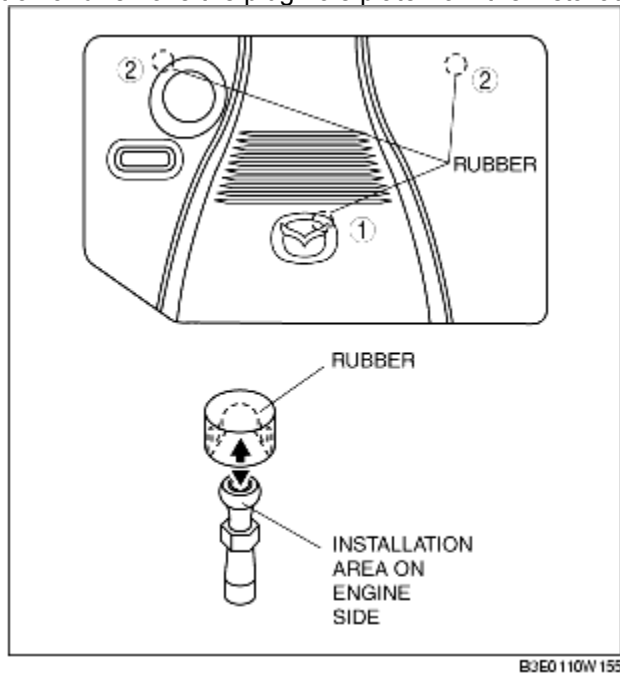

2. Install the plug hole plate in the reverse order of removal.