


# ENGINE DISASSEMBLY/ASSEMBLY [ZJ, Z6]


B3E011001001W03

1. Using the bolts **part number 99794 1025** or **M10×1.25, length 25 mm {0.98 in}** to install the **SST** to the position shown in the figure, hang the engine and transaxle, and then take it down from the engine jack.

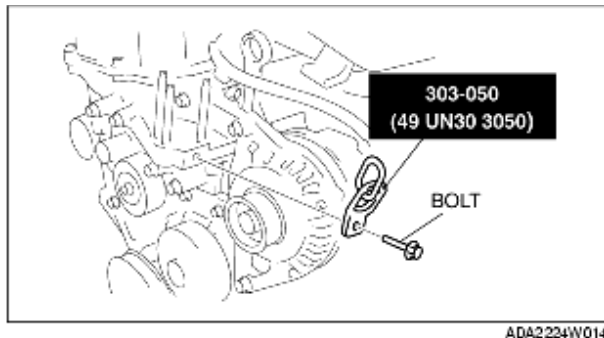

## Caution

- When attaching the SST in the engine rear side, install a suitable nut between the engine and the SST.

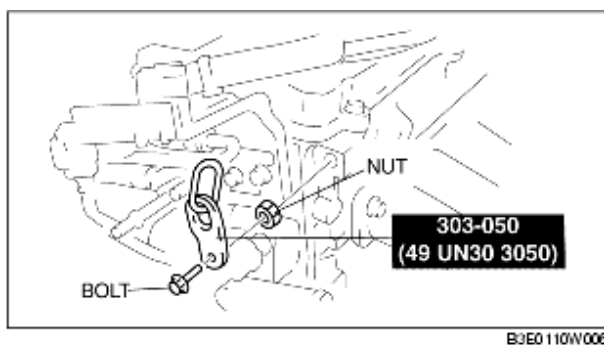

## Tightening torque

**38-51 N·m {3.9-5.2 kgf·m, 29-37 ft·lbf}**

2. Remove following parts:

- (1) Starter (See [STARTER REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
- (2) Joint shaft (See [JOINT SHAFT REMOVAL/INSTALLATION.](#))
- (3) Transaxle (See [AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION \[Z6\].](#)) (See [MANUAL TRANSAXLE REMOVAL/INSTALLATION \[F35M-R\].](#))
- (4) EGR pipe and EGR valve bracket (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\].](#)) (See [EXHAUST SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\].](#)) (See [EGR VALVE REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
- (5) Exhaust manifold (See [EXHAUST SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
- (6) Generator (See [GENERATOR REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
- (7) P/S oil pump (See [POWER STEERING OIL PUMP \(ZJ, Z6\) REMOVAL/INSTALLATION.](#))
- (8) Fuel hose, fuel distributor and fuel injector (See [FUEL INJECTOR REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
- (9) Intake manifold (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
- (10) Ignition coils (See [IGNITION COIL REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
- (11) CKP sensor (See [CRANKSHAFT POSITION \(CKP\) SENSOR REMOVAL/INSTALLATION \[ZJ, Z6\].](#))

3. Install in the reverse order of removal.