

ENGINE DISASSEMBLY/ASSEMBLY [LF]

B3E011001001W05

1. Disconnect the engine and transaxle. (See [AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION \[LF\]](#).)
(See [MANUAL TRANSAXLE REMOVAL/INSTALLATION \[F35M-R\]](#).)
2. Remove the following parts:
 - (1) Intake-air system (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[LF\]](#).)
 - (2) Generator (See [GENERATOR REMOVAL/INSTALLATION \[LF\]](#).)
 - (3) Ignition coils (See [IGNITION COIL REMOVAL/INSTALLATION \[LF\]](#).)
 - (4) Crankshaft position (CKP) sensor (See [CRANKSHAFT POSITION \(CKP\) SENSOR REMOVAL/INSTALLATION \[LF\]](#).)
3. Assemble in the reverse order of disassembly.