


REAR OIL SEAL REPLACEMENT [LF]

B3E011011399W02


1. Remove the drive plate. (ATX) (See [DRIVE PLATE REMOVAL/INSTALLATION](#).)
2. Remove the flywheel. (MTX) (See [CLUTCH UNIT REMOVAL/INSTALLATION](#).)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

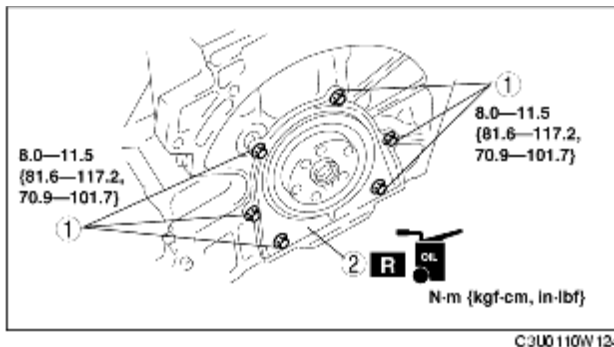

1	Bolt
2	Rear oil seal (See Rear Oil Seal Installation Note .)

Rear Oil Seal Installation Note


1. Apply silicone sealant to the mating faces as shown in the figure.

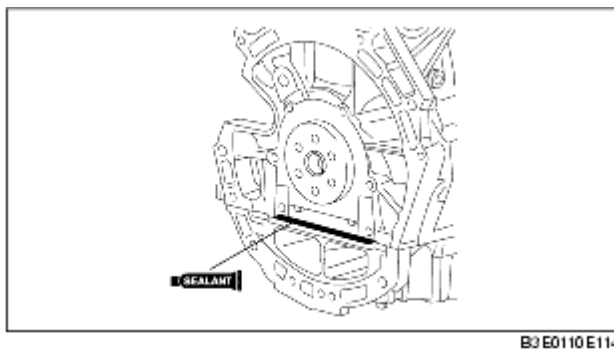

Thickness
4.0-6.0 mm {0.16-0.23 in}

2. Apply clean engine oil to the new oil seal lip.
3. Install the rear oil seal using the installer as shown in the figure.

4. Tighten the rear oil seal bolts in the order as shown in the figure.

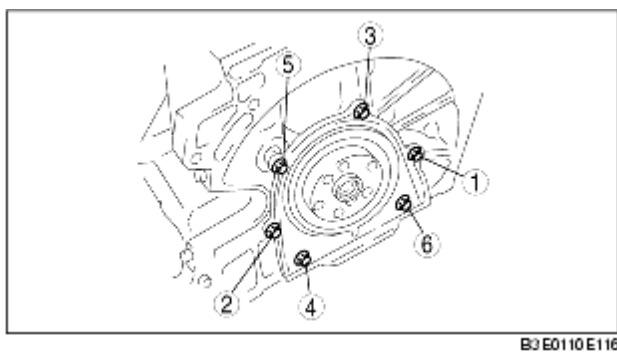

Tightening torque

8.0-11.5 N·m

{81.6-117.2 kgf·cm, 70.9-101.7 in·lb}