


DRIVE BELT REPLACEMENT [ZJ, Z6]

B3E011015800W03

1. Remove the under cover and splash shield (RH).
2. Rotate the drive belt auto tensioner in the direction shown in the figure and remove the drive belt.

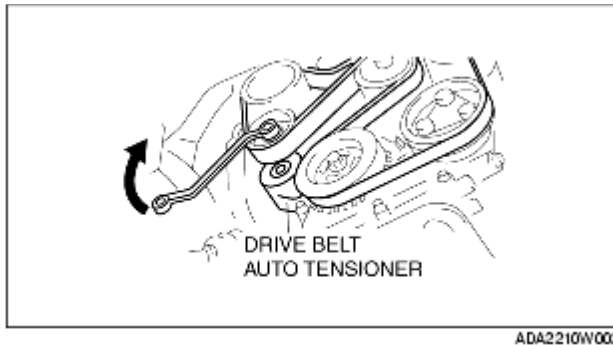

3. Install the new drive belt.
4. Install the under cover and splash shield (RH).