


DRIVE BELT AUTO TENSIONER INSPECTION [ZJ, Z6]

B3E011015800W04

1. Remove the drive belt. (See [DRIVE BELT REPLACEMENT \[ZJ, Z6\]](#).)
2. Verify that the drive belt auto tensioner moves smoothly in the operational direction.

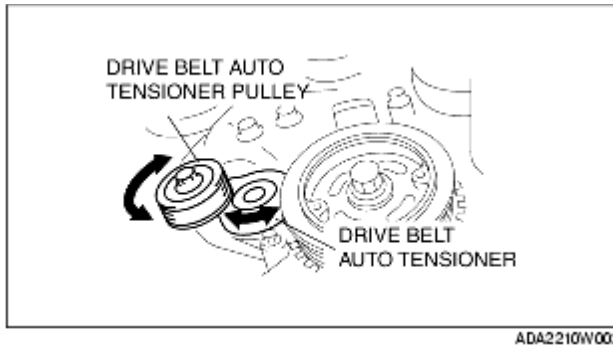

- If it does not move smoothly, replace the drive belt auto tensioner.
3. Rotate the drive belt auto tensioner pulley by hand and verify that it rotates smoothly.
- If it does not move smoothly, replace the drive belt auto tensioner.
4. Install the drive belt. (See [DRIVE BELT REPLACEMENT \[ZJ, Z6\]](#).)