


## DRIVE BELT REPLACEMENT [LF]


B3E011015800W06

### A/C Drive belt

1. Remove the engine under cover and splash shield (RH).
2. Cut the A/C drive belt using scissors.

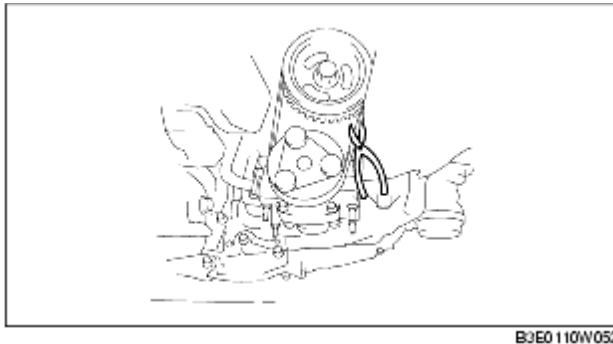


3. Install a jig (A) to the crankshaft pulley as shown in the figure.

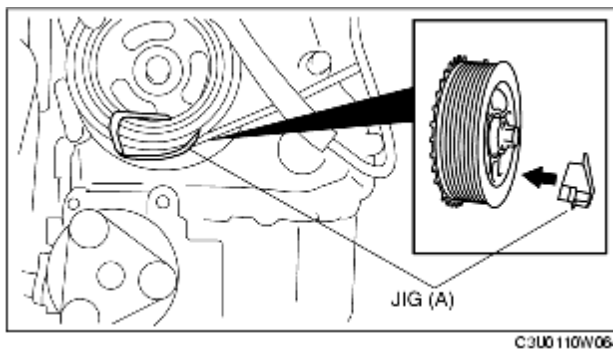


### Note

- The jig is prepackaged with a new A/C drive belt.

4. Install a new A/C drive belt to the A/C compressor pulley, move jig (A) upward, and then install the A/C drive belt to the crankshaft pulley.

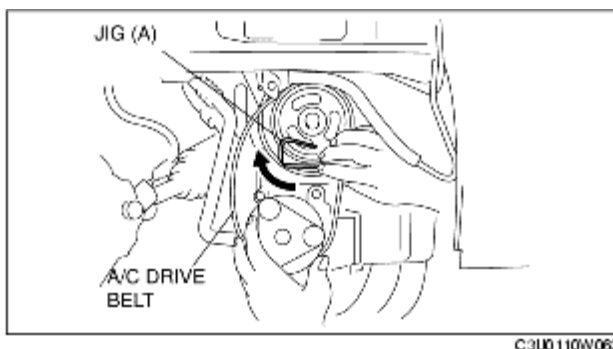

5. Install jig (B) to the A/C compressor mount as shown in the figure.

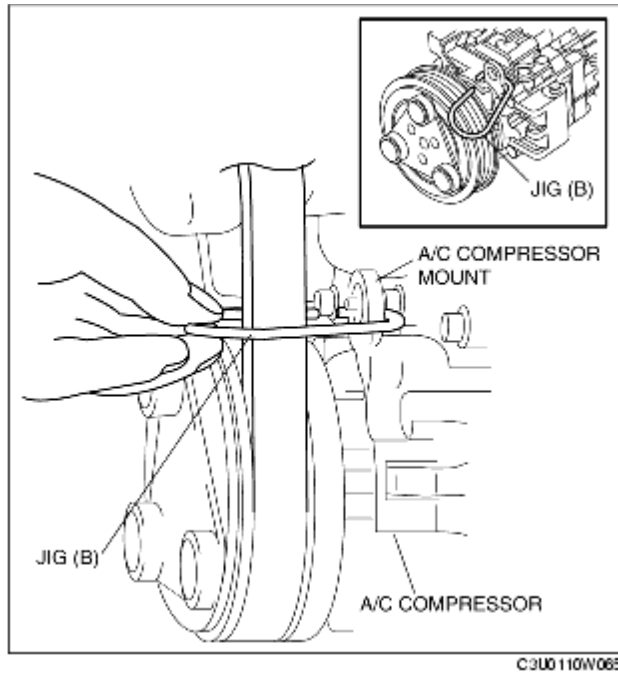


### Caution

- The A/C drive belt cannot be reused.

### Note

- The jig is prepackaged with a new A/C drive belt.
- Do not pass jig (B) through the A/C compressor mount hole.

6. Rotate the crankshaft pulley to the right using a wrench and install the A/C drive belt.

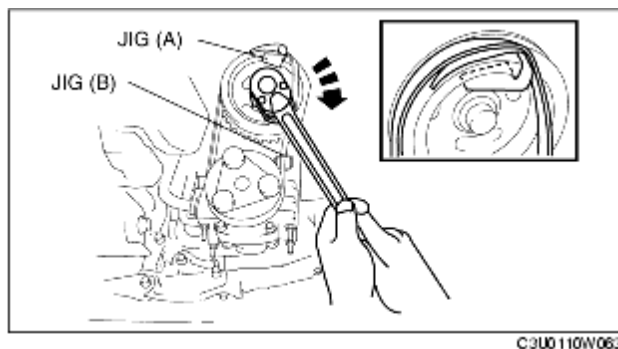

7. Install the under cover and splash shield (RH).


## Generator Drive Belt

1. Remove the plug hole plate.

(See [PLUG HOLE PLATE REMOVAL/INSTALLATION \[LF\]](#).)

2. Remove the A/C drive belt.

3. Turn the center of the auto tensioner pulley counterclockwise to release tension to the drive belt tension.

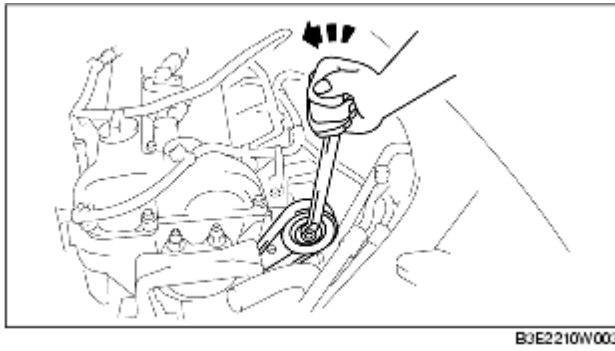

4. Remove the generator drive belt.
5. Install a new generator drive belt.
6. Install the A/C drive belt.
7. Install the plug hole plate.

(See [PLUG HOLE PLATE REMOVAL/INSTALLATION \[LF\]](#).)