


## DRIVE BELT AUTO TENSIONER INSPECTION [LF]

---

B3E011015980W01

1. Remove the drive belt. (See [DRIVE BELT REPLACEMENT \[LF\]](#).)
2. Verify that the generator drive belt auto tensioner moves smoothly in the operational direction.
  - If it does not move smoothly, replace the generator drive belt auto tensioner.

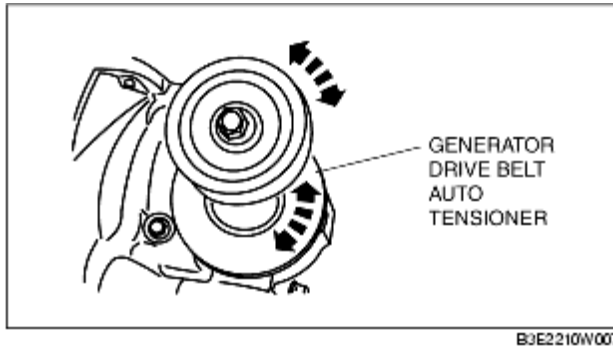

3. Turn the generator drive belt auto tensioner pulley by hand and verify that it rotates smoothly.
  - If it does not move smoothly, replace the generator drive belt auto tensioner.
4. Install the generator drive belt. (See [DRIVE BELT REPLACEMENT \[LF\]](#).)