


## LUBRICATION SYSTEM LOCATION INDEX [ZJ, Z6]

B3E011101003W01

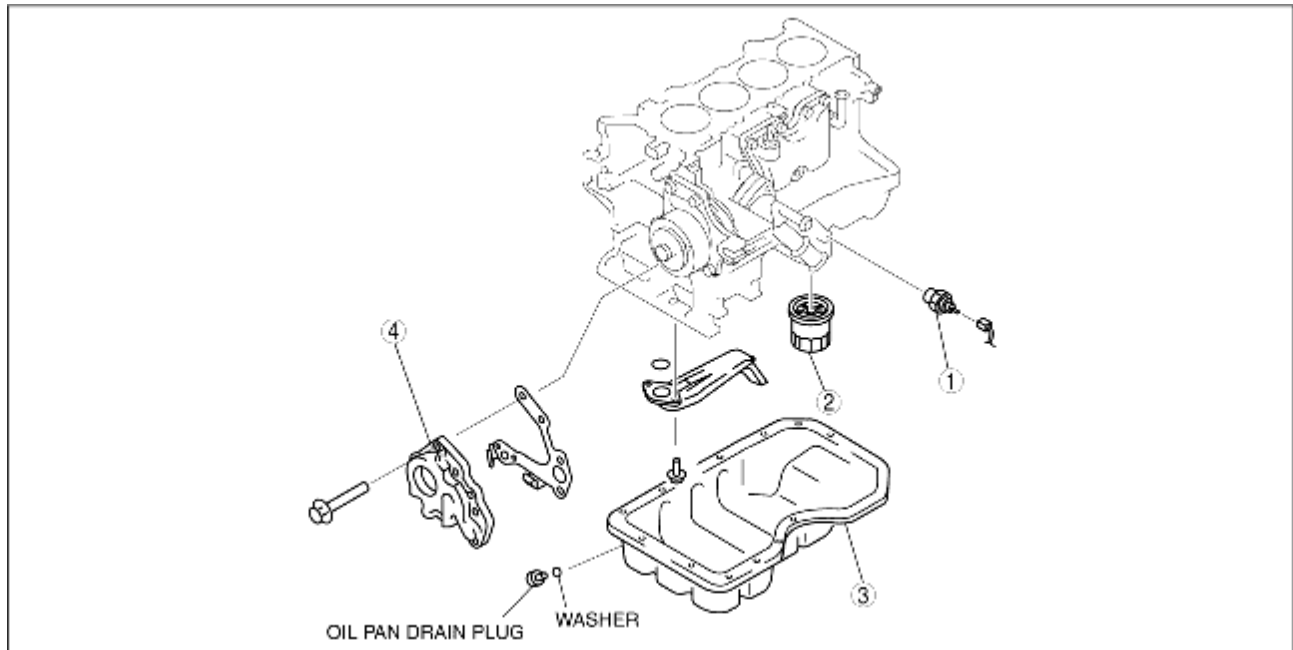

B3E0111W132

1	Oil pressure switch (See <a href="#">OIL PRESSURE INSPECTION [ZJ, Z6].</a> )
2	Oil filter (See <a href="#">OIL FILTER REPLACEMENT [ZJ, Z6].</a> )
3	Oil pan (See <a href="#">OIL PAN REMOVAL/INSTALLATION [ZJ, Z6].</a> )
4	Oil pump (See <a href="#">OIL PUMP REMOVAL/INSTALLATION [ZJ, Z6].</a> ) (See <a href="#">OIL PUMP DISASSEMBLY/ASSEMBLY [ZJ, Z6].</a> ) (See <a href="#">OIL PUMP INSPECTION [ZJ, Z6].</a> )