


# OIL PUMP DISASSEMBLY/ASSEMBLY [ZJ, Z6]

B3E011119220W03

## Warning

- Continuous exposure with used engine oil has caused skin cancer in laboratory mice. Protect your skin by washing with soap and water immediately after working with engine oil.

1. Disassemble in the order indicated in the table.

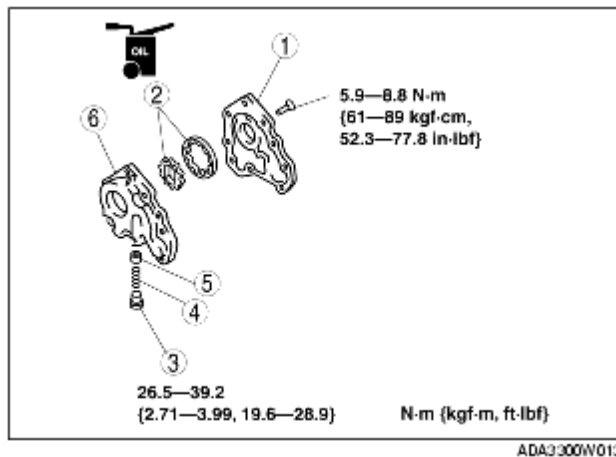

1	Oil pump cover
2	Inner rotor, outer rotor (See <a href="#">Inner Rotor, Outer Rotor Installation Note</a> .)
3	Plunger plug
4	Plunger spring
5	Control plunger
6	Oil pump body

2. Assemble in the reverse order of disassembly.

## Inner Rotor, Outer Rotor Installation Note

1. Align the punch marks of the inner and outer rotor and assemble.

