

ENGINE COOLANT LEVEL INSPECTION

B3E011215001W02

Warning

- Remove and install all parts when the engine is cold, otherwise they can cause severe burns or serious injury.
- Turn off the engine and wait until it is cool. Even then, be very careful when removing the cap. Wrap a thick cloth around it and slowly turn it counterclockwise 2.5 turns. Step back while the pressure escapes.
- When you are sure all the pressure is gone, turn the cap using the cloth, and remove it.

1. Verify that the engine coolant level in the coolant reserve tank installed in front of the suspension tower is between the MIN and MAX marks.

2. If the engine coolant level is below MIN mark, add engine coolant.