


WATER PUMP REMOVAL/INSTALLATION [ZJ, Z6]

B3E011215010W01

Warning

- Remove and install all parts when the engine is cold, otherwise they can cause severe burns or serious injury.

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
2. Disconnect the negative battery cable.
3. Remove the under cover and splash shield as a single unit.
4. Drain the engine coolant. (See [ENGINE COOLANT REPLACEMENT](#).)
5. Set the coolant reserve tank out of the way.
6. Remove the drive belt. (See [DRIVE BELT REPLACEMENT \[ZJ, Z6\]](#).)
7. Set the power steering fluid tank out of the way.
8. Remove the generator. (See [GENERATOR REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
9. Remove in the order indicated in the table.

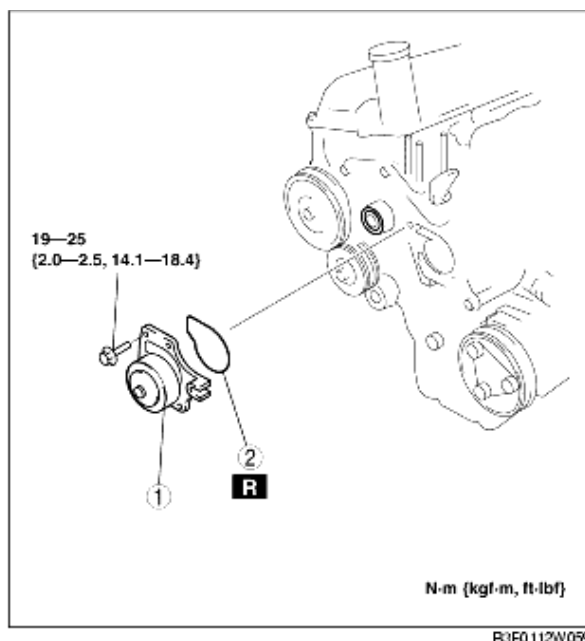

1	Water pump component
2	O-ring

10. Install in the reverse order of removal.
11. Add engine coolant. (See [ENGINE COOLANT REPLACEMENT](#).)

12. Inspect for engine coolant leakage. (See [ENGINE COOLANT LEAKAGE INSPECTION](#).)