


# THERMOSTAT REMOVAL/INSTALLATION [ZJ, Z6]

B3E011215171W01

## Warning

- Remove and install all parts when the engine is cold, otherwise they can cause severe burns or serious injury.

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
2. Disconnect the negative battery cable.
3. Remove the under cover.
4. Drain the engine coolant. (See [ENGINE COOLANT REPLACEMENT](#).)
5. Disconnect the lower radiator hose from the thermostat.
6. Remove in the order indicated in the table.

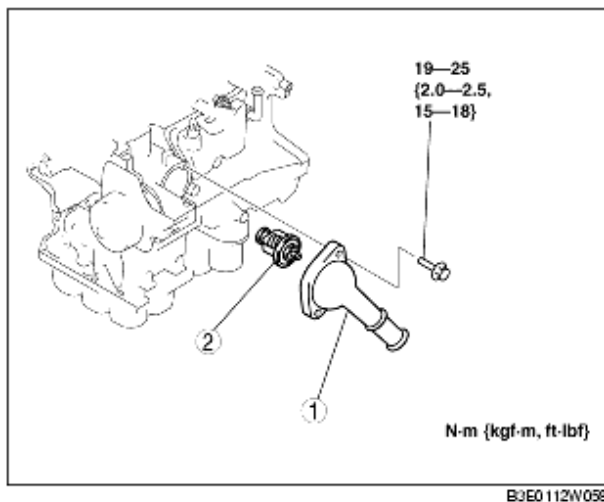

1	Thermostat cover
2	Thermostat (See <a href="#">Thermostat Installation Note</a> .)

7. Install in the reverse order of removal.
8. Add engine coolant. (See [ENGINE COOLANT REPLACEMENT](#).)
9. Inspect the system for engine coolant leakage. (See [ENGINE COOLANT LEAKAGE INSPECTION](#).)

## Thermostat Installation Note

1. Install the thermostat into the thermostat case with the jiggle pin at the top.

