


INTAKE-AIR SYSTEM DIAGRAM [LF]

B3E011300113T13

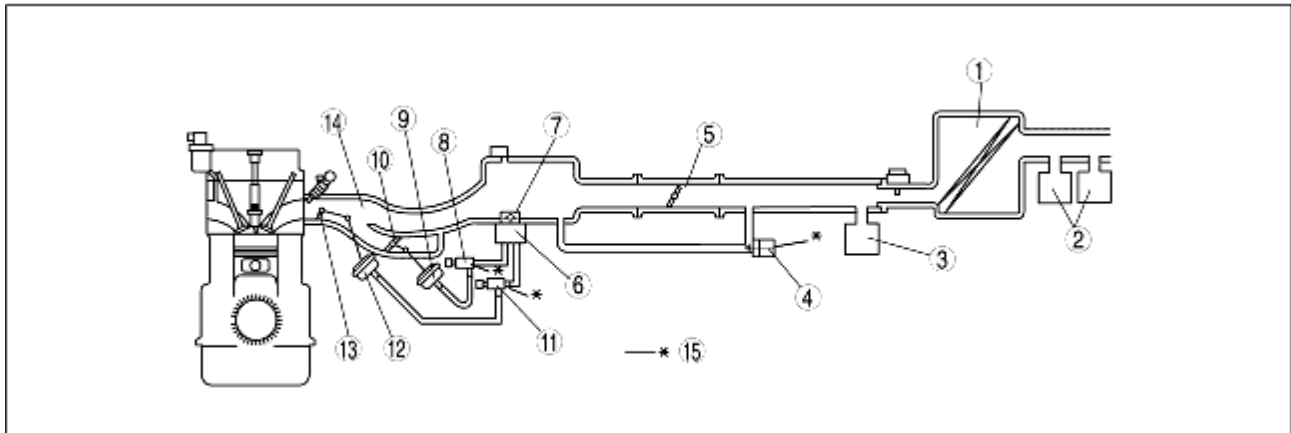

B3E0113T102

1	Air cleaner
2	Resonance chamber (fresh-air duct side)
3	Resonance chamber (air cleaner side)
4	IAC valve
5	Throttle body
6	Vacuum chamber
7	Check valve
8	Variable intake-air solenoid valve
9	Variable intake-air shutter valve actuator
10	Variable intake-air shutter valve
11	Variable tumble solenoid valve
12	Variable tumble shutter valve actuator
13	Variable tumble shutter valve
14	Intake manifold
15	To PCM