


INTAKE-AIR SYSTEM LOCATION INDEX [ZJ, Z6]

B3E011300113W01

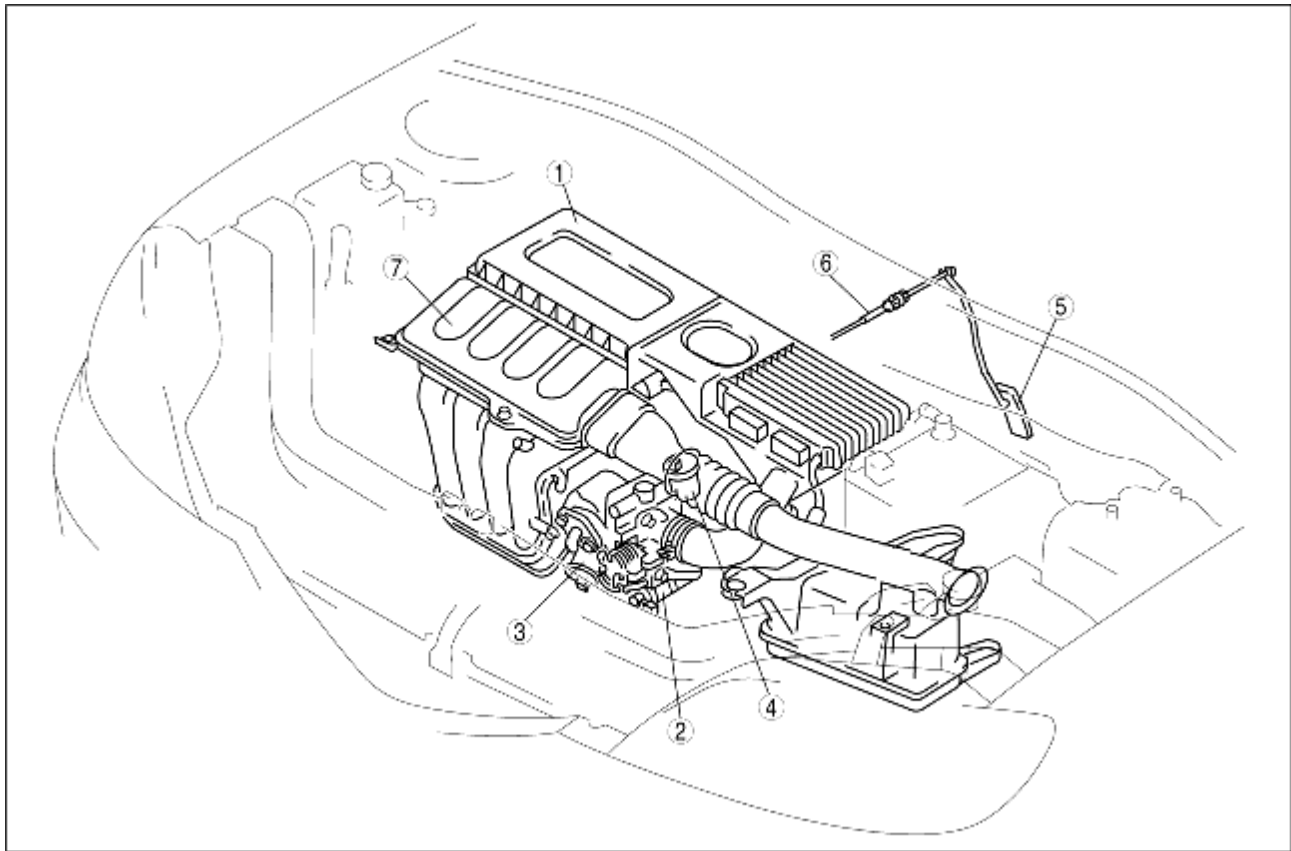

B3E0113W001

1	Air cleaner (See AIR CLEANER ELEMENT INSPECTION [ZJ, Z6].)
2	IAC solenoid valve (See IDLE AIR CONTROL (IAC) VALVE REMOVAL/INSTALLATION [ZJ, Z6].) (See IDLE AIR CONTROL (IAC) VALVE INSPECTION [ZJ, Z6].)
3	Variable intake-air shutter valve actuator (Z6) (See VARIABLE INTAKE-AIR SHUTTER VALVE ACTUATOR REMOVAL/INSTALLATION [Z6].) (See VARIABLE INTAKE-AIR SHUTTER VALVE ACTUATOR INSPECTION [Z6].)
4	Variable tumble shutter valve actuator (See VARIABLE TUMBLE SHUTTER VALVE ACTUATOR REMOVAL/INSTALLATION [ZJ, Z6].) (See VARIABLE TUMBLE SHUTTER VALVE ACTUATOR INSPECTION [ZJ, Z6].)
5	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [ZJ, Z6].)
6	Accelerator cable (See ACCELERATOR CABLE INSPECTION/ADJUSTMENT [ZJ, Z6].)
7	Intake-air system (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [ZJ, Z6].)