


INTAKE-AIR SYSTEM LOCATION INDEX [LF]

B3E011300113W06

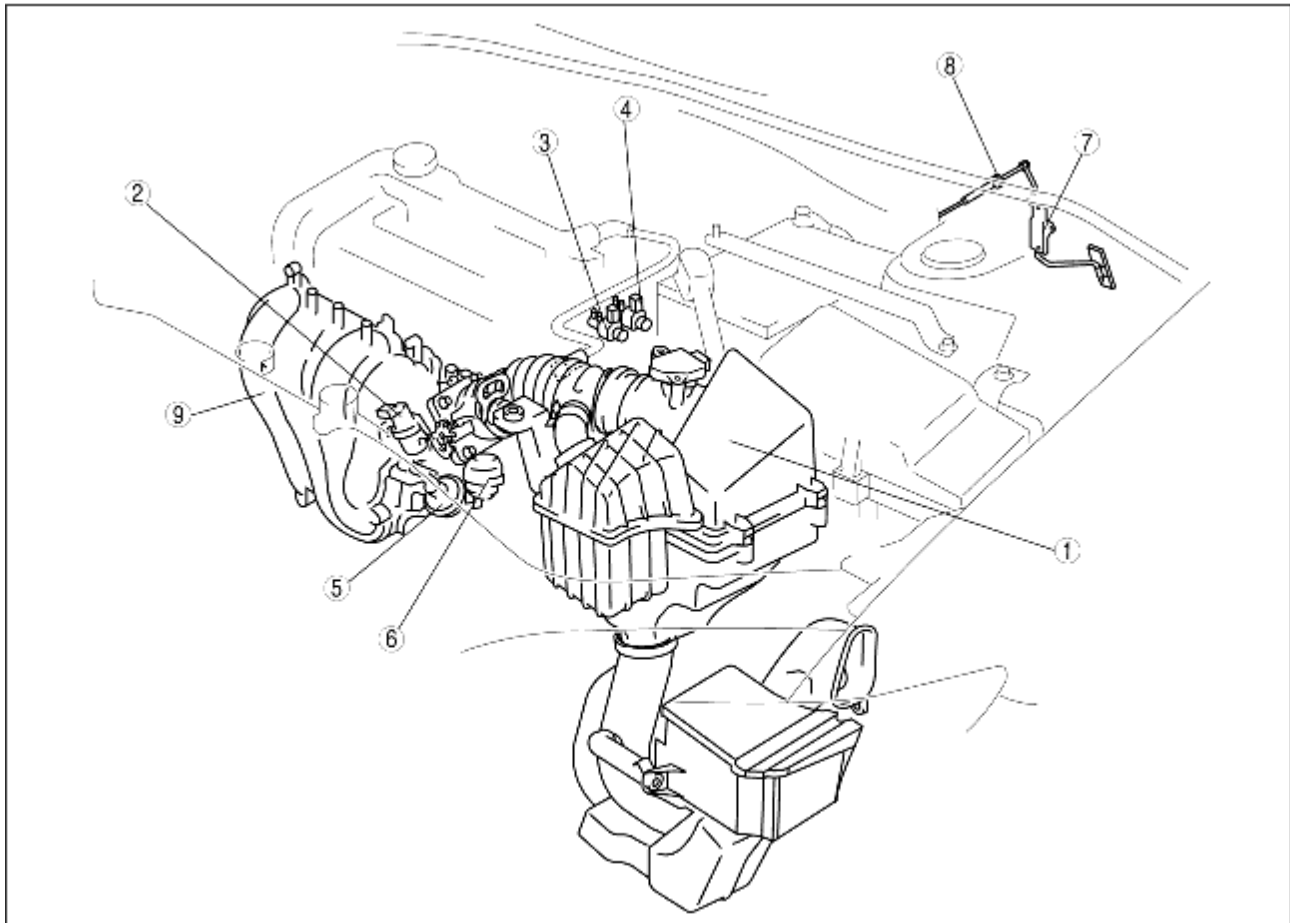

B3E0113W101

1	Air cleaner (See AIR CLEANER ELEMENT INSPECTION [LF] .)
2	IAC solenoid valve (See IDLE AIR CONTROL (IAC) VALVE INSPECTION [LF] .)
3	Variable intake-air solenoid valve (See VARIABLE INTAKE-AIR SOLENOID VALVE INSPECTION [LF] .)
4	Variable tumble solenoid valve (See VARIABLE TUMBLE SOLENOID VALVE INSPECTION [LF] .)
5	Variable intake-air shutter valve actuator (See VARIABLE INTAKE-AIR SHUTTER VALVE ACTUATOR INSPECTION [LF] .)
6	Variable tumble shutter valve actuator (See VARIABLE TUMBLE SHUTTER VALVE ACTUATOR INSPECTION [LF] .)
7	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [LF] .)
8	Accelerator cable (See ACCELERATOR CABLE INSPECTION/ADJUSTMENT [LF] .)
9	Intake-air system (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [LF] .)