


RESONANCE CHAMBER FUNCTION [LF]

B3E011313191T02

- Installed on the fresh air duct and air cleaner to reduce intake air noise.

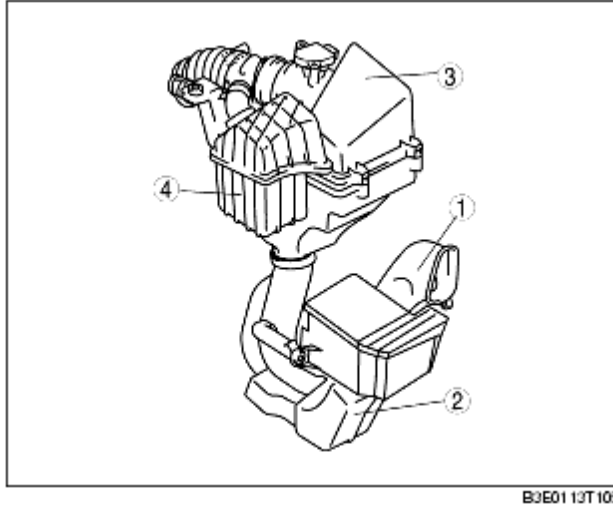

1	Fresh-air duct
2	Resonance chamber (fresh-air duct side)
3	Air cleaner
4	Resonance chamber (air cleaner side)