

AIR CLEANER ELEMENT INSPECTION [LF]

B3E011313300W02

1. Remove the air cleaner element. (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[LF\]](#).)
2. Inspect the following items:
 - If there is any malfunction, clean or replace the air cleaner element.
 - If the replacement interval has come, replace the air cleaner element.
 - Is the air cleaner element soiled, damaged, or bent?
 - Are the air cleaner case and the air cleaner element correctly sealed?
 - Is the correct air cleaner element installed?